

User Manual

IDS-3315 Series

15" Industrial Front IP65 Monitor



Copyright

The documentation and the software included with this product are copyrighted 2018 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to improve the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated, or transmitted in any form, or by any means, without the prior written permission of Advantech Co., Ltd. The information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties that may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp. All other product names or trademarks are properties of their respective owners.

Product Warranty (2 years)

Advantech warrants the original purchaser that all of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products that have been repaired or altered by persons other than repair personnel authorized by Advantech, or products that have been subject to misuse, abuse, accident, or improper installation. Under the terms of this warranty, Advantech assumes no liability for the consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced free of charge during the warranty period. For out-of-warranty repairs, customers will be billed according to the cost of the replacement materials, service time, and freight. Please consult your dealer for more details.

If you suspect that your product is defective, follow the steps outlined below.

- 1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages displayed when the problem occurs.
- 2. Call your dealer and describe the problem. Please have your manual, product, and all relevant information readily available.
- If your product is diagnosed as defective, obtain a return merchandize authorization (RMA) number from your dealer. This allows us to process your return more quickly.
- 4. Carefully pack the defective product, a completed Repair and Replacement Order Card, and a proof of purchase date (such as a photocopy of your sales receipt) in a shippable container. Products returned without a proof of purchase date are not eligible for warranty service.
- 5. Write the RMA number clearly on the outside of the package and ship it prepaid to your dealer.

Part Number: 2006331500 Printed in Taiwan Edition 1 June 2018

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from damage due to electrostatic discharge (ESD) or electromagnetic interference (EMI) leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference. In such cases, users are required to correct the interference at their own expense.

Technical Support and Assistance

- 1. Visit the Advantech website at http://support.advantech.com to obtain the latest product information.
- 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support or additional assistance. Please have the following information ready before calling:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - Comprehensive description of the problem
 - The exact wording of any error messages

Warnings, Cautions, and Notes



Warning! Warnings indicate conditions that if not observed can result in personal injury!



Caution! Cautions are included to prevent hardware damage or data losses.



New batteries are at risk of exploding if incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.



Notes provide additional optional information.



Document Feedback

To assist us in improving this manual, we welcome all comments and constructive criticism. Please send all feedback in writing to support@advantech.com

Safety Instructions

- 1. Read these safety instructions carefully.
- 2. Retain this user manual for future reference.
- 3. Disconnect this equipment from all AC outlets before cleaning. Use a damp cloth to clean the equipment. Do not use liquid or spray detergents.
- For plugable equipment, the power outlet socket should be located near the 4. equipment and easily accessible.
- Protect the equipment from humidity. 5.
- Place this equipment on a reliable surface during installation. Dropping or letting 6. the equipment fall may cause damage.
- The openings of the enclosure are for air convection. Prevent the equipment 7. from overheating. Do not cover the openings.
- Ensure that the voltage is correct before connecting the equipment to a power 8. outlet.
- Position the power cord away from high-traffic areas. Do not place anything over 9. the power cord.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If idle for a long duration, disconnect the equipment from the power source to avoid damage from transient overvoltage.
- 12. Never pour liquid into an opening. This may cause fire or electrical shock.
- 13. Never open the equipment. For safety reasons, the equipment should only be opened by qualified service personnel.
- 14. If one of the following occurs, have the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment is malfunctioning or does not function according to the user manual.
 - The equipment has been dropped or damaged.
 - The equipment shows obvious signs of breakage.
- 15. Do not store this equipment in an environment where the temperature fluctuates below -20 °C (-4 °F) or above 60 °C (140 °F) because this could damage the equipment. The equipment should be stored in a controlled environment.
- 16. The sound pressure level at the operator's position does not exceed 70 dB (A) in accordance with IEC 704-1:1982.

DISCLAIMER: These instructions are provided according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Caution! Information regarding the adapter output rating (12 VDC, 5 A/18 W min) is provided in the user manual to assist with adaptor selection if a power adapter is not shipped with the unit.



vi

Contents

Chapter	1	Overview	.1
	1.1 1.2 1.3 1.4	Introduction Features Applications Product Photos	2 2 2
	1.5	Naming Rule	3
Chapter	2	System Setup	.5
	2.1 2.2 2.3	Specifications Rear Mount Assembly Packing List	7
Chapter	3	Touchscreen	.9
	3.1 3.2 3.3	OSD Functions OSD Menu Details	. 11 . 11 . 12 . 14 . 15 . 16
Appendix	κA	Troubleshooting	21
	A.1 A.2	Introduction Troubleshooting	



Overview

- Introduction
- Features
- Applications
- Product Photos
- Naming Rule

1.1 Introduction

Advantech's IDS-3315 series is a brand new Industrial front IP65 Monitor, designed for waterproof and dustproof at the front side for different applications, such as public signage, front of house information, medical, and point-of-sale.

1.2 Features

- 15" XGA LED backlight panel which provides 20~30% power saving
- -20°C ~ +60°C wide operating temperature range support
- Front IP65 for waterproof and dustproof
- Design with 5-wire resistive and P-cap touchscreen (optional)
- Versatile mounting methods for rear mount and VESA mount (75 x 75 mm, 100 x 100 mm)

1.3 Applications

Application scenarios


- KIOSK / POI machine
- Transportation machine
- Ticketing machine
- Financial ATM
- Entertainment / gaming / slot machine
- Human-Machine Interface equipment controller monitor
- Public communication machine
- Public advertisement machine

1.4 Product Photos

Front View



1.5 Naming Rule

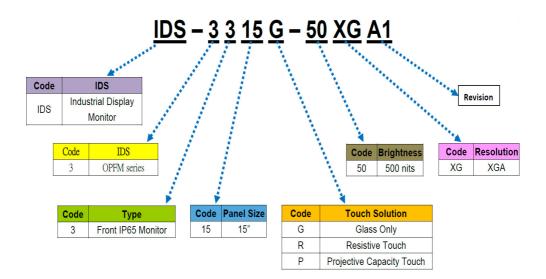

4



System Setup

- Specifications
- Dimensions
- Rear Mount Assembly
- Cable Clamp
- Packing List

2.6 Specifications




The IDS-3315 offers the following features.

Unless otherwise indicated, all the specifications listed below are subject to change without prior notification.

	Madal	100.2245		
	Model	IDS-3315		
	Size	15" LED panel		
	Resolution	1024 x 768 (XGA)		
	Viewing Angle	88°/88° (H), 88°/88° (V)		
Display	Brightness	500 (cd/m ²)		
	Color Support	16.7M/262K		
	Contrast Ratio	2500:1		
	Response Time	16 [msec]		
	Backlight Life (hrs)	50,000 hrs		
	Touchscreen Type	5-Wire Resistive Touchscreen / Projected Capaci- tive Touchscreen		
Touchscreen	Surface Hardness	3H / Mohs 5		
	Durability	10 million touches / -		
	Transparency	80% / 89 ± 3%		
	Operating Temperature	-20 ~ 60° C (-4 ~ 140° F)		
	Storage Temperature	-30 ~ 70° C (-22 ~ 158° F)		
Environment	Humidity	5 ~ 95% @ 40° C, non-condensing		
	Vibration	5-500 Hz, 0.026G2/Hz, 2.16Grms, X, Y, Z 1 hour per axis		
	I/O	VGA x 1, DVI x 1, HDMI x 1, 12V DC Jack x 1, USB x 1, RS232 x 1 (RS232 and USB are reserved for the connection to enable touch usage only)		
System	OSD	Keys: Power on/off, Menu/Enter, Left/Up, Right/ Down, Exit/Auto, Source Menu Functions: Brightness, Contrast, Screen Set- ting, Color Temp, OSD Language, Reset, Auto Adjust		
	Power	60 W power adapter, with AC 100 ~ 240 V input and DC +12 V @ 5 A output		
	EMC Compliance	CE/FCC/CCC		

2.7 Rear Mount Assembly

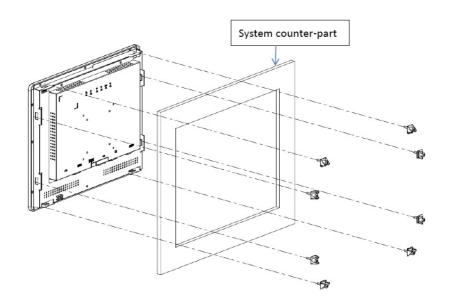



Suggested screws - M4x10L

2.8 Packing List

- 1 x VGA cable 15P(M) 1.8 meter
- 1 x USB-A(M)/USB-A(M) 1.8 meter
- 8 x Panel-mount clamps
- 8 x Panel-mount clamper screws: M4_25L
- 1 x Cable clamp
- 1 x Cable clamp screw
- 1 x Cable tie
- 1 x 60 W DC12V Power Adapter (optional order)
- 1 x Power Cord (optional order)
- 1 x DVI cable 2.0 meter (optional order)
- 1 x RS232 9P/9P 1.8M M/F cable (optional order)

Note! The accessory cables listed above may differ according to SKU.



IDS-3315 User Manual



Touchscreen ■ OSD Functions ■ Touch Drivers

3.1 OSD Functions

IDS-3315 is equipped with 1024 x 768 display resolution and the following OSD features:

Buttons	Description			
Power	Turn the monitor power ON or OFF			
Monu	Activate the OSD menu			
Menu	Select			
Auto/Exit	Automatically adjust the clock, phase			
Auto/Exit	H-position and V-position			
	Move the selector to the previous option			
Value Up/Down	Reduce the value of the selected option			
LED Function				

DPMS ON	Green
DPMS STANDBY	Orange
DPMS OFF	Red

Hot Key	Function
Value Down	ECO mode

3.2 OSD Menu Details

3.2.1 Luminance

Contrast



Brightness



Eco Mode

	lumi	nance		Luminance
	Contrast	50	Contrast	
Ŧ	Brightness	90	Brightne	20
? .:	Eco Mode	Standard		ie 🕇 Text 🕨
+	DCR	Off	+ (050 + +	Off
د			⊊ ‡5	
AUTO	Exit OC	:Move MENU:Select	AUTO [:] Exit	O C : Move (MENU):Selec





DCR

Contrast	inance 50	Contrast	inance 50
Brightness	90	Brightness	90
Eco Mode	Standard	Eco Mode	Standar
DCR	Off	(♦000) DCR	◀ Off

3.2.2 Image Setup

Clock

Image	Setup	in 🕐 🕅	nage Setup⊷
Clock	50	Clock+ ^J	50⊀
Phase	14	Phase+	14+
H.Position	50	H.Position+	50₽
V.Position	50	♦050 ♦ V.Position+	50⊷
Image Ratio	Wide	Image Ratio+	Wide⊷
		د	

Phase

Image	Setup		mage Setup
Clock	50	Clock	50
Phase	14	Phase	14
H.Position	50	H.Position	50
V.Position	50	+ 050 + V.Position	50
Image Ratio	Wide	Image Ratio	Wide
		د 12	

H. Position

	Image	e Setup		Image Setup
	Clock	50	Clock	50
	Phase	14	Phase	14
!	H.Position	50	H.Position	50 💻
÷ 💼 +	V.Position	50	V.Position	50
	Image Ratio	Wide	Image Ratio	Wide
د ¦2			دا ء	
AU	TO [:] Exit ⊙⊕	: Move MENU: Select	AUTO [:] Exit	O Hove MENU:Select

V. Position

(* *)	Image	e Setup		;;;;]	Image Setup	
	Clock	50		Clock	50	D
	Phase	14		Phase	14	4
	H.Position	50		H.Position	n 50	0
+ 050 +	V.Position	50		V.Position	ז 50	
تيني. د	Image Ratio	Wide		Image Ra	tio V	/ide
AU	TO:Exit O€	: Move MEN	Select	AUTO [:] Exit		MENU:Sele

Image Ratio


Image SetupImage SetupClock50Clock50Phase14Phase14H.Position50H.Position50	
Phase 14 Phase 14	
H.Position 50 H.Position 50	
V.Position 50	
Image Ratio Wide	de 🕨

**	Image	e Setup	
	Clock	50	
	Phase	14	
	H.Position	50	
	V.Position	50	
	Image Ratio	4:3]
<mark>د ¦</mark> ه			
AUT	⊙ [:] Exit ⊃€	: Move	Select

3.2.3 Color Temperature

Color Temperature

Color Temp.	
Color Temp.	Cool
Red	46
Green	40
Blue	47
Exit	Hove MEN
Co	lor Temp.
Color Temp.	Warm
Red	62
Green	48
Blue	48
Exit	
Co	lor Temp.
Color Temp.	User
Red	50
Green	50
Blue	50

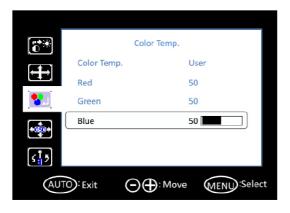

3.2.4 OSD Setup

H. Position

,				
	OSD) Setup	* *	OSD Setup
(††	H.Position	50	H.Position	50
	V.Position	50	V.Position	50
7	Timeout	10	Timeout	10
- 050 -	Language	English	Language	English
5			<u>د</u>	
AU	TO:Exit	:Move MENU:Select	AUTO: Exit	

V. Position

6	OSD :	Setup	**	OSD	Setup
(†	H.Position	50		H.Position	50
	V.Position	50		V.Position	50
!!	Timeout	10	•• •••	Timeout	10
- 050 -	Language	English		Language	English
s <mark>:</mark> ۶			د] ه		
AU	TO:Exit OC	: Move MENU:S	Select		: Move MENU:Select

Timeout

e *	OSD S	etup		OSD Setup	
	H.Position	50	H Dociti	ion	50
÷	V.Position	50	V.Positi	on	50
	Timeout	10	Timeou	t	10
+ 050 + +	Language	English	Languag	ge	English
د ‡5			5		
AUTO	Exit O	: Move MENU:Sel	AUTO [:] Exit		


Language

**	Color 1	ēmp.
	Color Temp.	User
	Red	50
? .:	Green	50
-	Blue	50
<u>د ا</u> ک		
AUT	⊡:Exit ⊙⊕	Move MENU:Selec





3.2.5 Extra



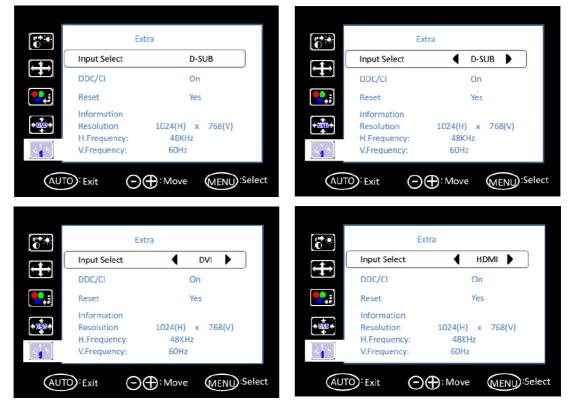


DDC/CI

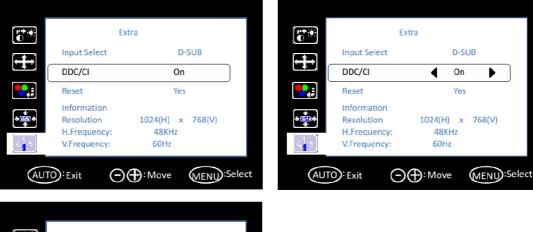

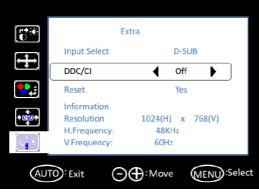



Reset

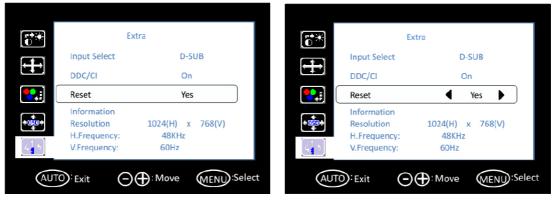

▶

Layer 1	Layer 2	Layer 3	Comment	Default Value	
	Contrast	0	– Adjusts contrast	50	
		100			
	Brightness	0	– Adjusts brightness (backlight)	90	
		100			
		Standard		_	
Luminance		Sport		_	
	ECO Mode	Movie		- Standard	
		Game		_	
		Internet		_	
		Text			
	DCR	On	– Sets dynamic contrast ratio	Off	
		Off			
	Clock	0	_Adjusts clock latency of output	input resolution	
		100	capture window		
	Phase	0	Adjusts clock phase of output	Depends on the input resolution	
		100	capture window		
		0	Adjusts horizontal position of	50	
Image setup	H. Position	100	output capture window	50	
		0	Adjusts vertical position of out-	50	
	V. Position	100	put capture window	50	
	Image Ratio	Wide	Adjusts aspect ratio to full screen	Wide	
		4:3	Adjusts aspect ratio to 4:3 screen		
	Color Temp.	Warm>	Adjusts color temperature to warm	- - User -	
Color Tem-		Normal>	Adjusts color temperature to normal		
perature		Cool>	Adjusts color temperature to cool		
		User>	Adjusts color temperature to user defined		
	H. Position	0	Adjusts OSD horizontal posi-	50	
		100	tion	50	
	V. Position	0	- Adjusts OSD vertical position	50	
	v. Position	100	Adjusts CSD ventical position	50	
	Timeout	5	- Sets OSD timeout counter	10	
	inicout	100		10	
OSD Setup		English	_		
USD Selup		Spanish	_		
		French	_		
	Language	Portuguese	– Sets OSD display language	English	
	Language	Russian	_	English	
		简体中文	_		
		繁體中文	_		
		Korean			

Extra		D-Sub		Depends on the	
	Input Select	HDMI	Sets input source	input source	
		DVI			
	DDC/CI	On	- Sets DDC/CI function on/off	On	
		Off			
	Deast	Yes	-Sets user setting reset	On	
	Reset	No			
		Resolution	 Display current source infor- mation 		
	Information	H. Frequency		Depends on the input source	
		V. Frequency		input source	

3.3 Touch Drivers

The touchscreen driver is available online at the Advantech website. Use the following link to access the driver: http://support.advantech.com/support/default.aspx



Troubleshooting

A.1 Introduction

If the monitor is malfunctioning or does not operate according to the user manual, refer to the following instructions before calling the Advantech service center.

If you are unable to correct the faults using the instructions provided below, please contact your distributor or the Advantech service center.

A.2 Troubleshooting

The image is displayed incorrectly/the full screen image does not appear

Ensure that the screen resolution on the motherboard is correct.

The screen image is not centered

Adjust the horizontal and vertical position of the OSD or select the "Auto" option for automatic adjustment.

Out of range

- If an "Out of Range" message appears onscreen, this indicates that the display output signal is not compatible with the LCD display (for example, the output resolution exceeds the LCD display resolution).
- Adjust the BIOS settings to match the correct resolution.

No signal

The display is powered on but is not receiving or displaying output signals from the computer. Check all power switches, power cables, and VGA signal cables and ensure that both ends of all cables are properly connected.

Going to sleep

If the system goes to sleep, either the display has been set to power-saving mode or is experiencing a sudden signal disconnection problem. Check the BIOS system settings and/or Windows configuration. Then check both ends of the power cable connected to the computer.



www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, such as electronically, by photocopying, recording, or otherwise, without prior written permission from the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2018