


# PPC Series

## PPC-STAND-A1E User Guide

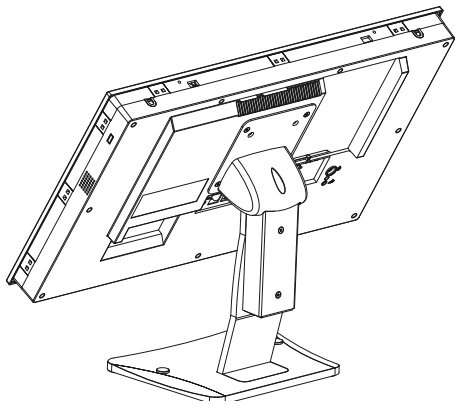

### Packing List

No.	Name	Qty.	Pic.	No.	Name	Qty.	Pic.
A	Screw (M4x8L)	12 (4 x spare)		B	Screw (M4x6L)	6 (2 x spare)	
C	Screw (M4x5L)	2 (1 x spare)		1	Hinge	1	
2	VESA Bracket	1		3	Hinge Cover	1	
4	Base Plate	1					


### IMPORTANT Base Plate Adjustment

**FIRST**, consider the thickness of your PC for adjusting the feet of the stand.

If the PPC has a thickness less than 80 mm, leave the feet in Position 1 (default).


If the PC has thickness of more than 80 mm, loosen the two screws shown in the red boxes of the figure and adjust the position of the feet to Position 2. Once the feet are in the correct position, tighten the two screws.

**Note:** If the PPC's thickness is more than 125 mm, this stand CANNOT stably hold the PPC.

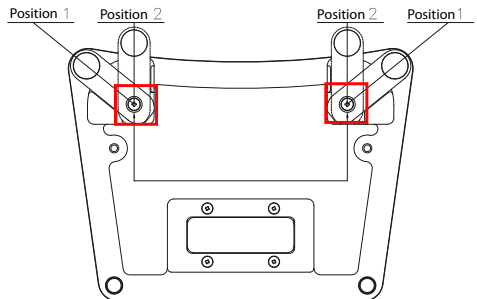


## Installation Guide


**Step 1:** As shown in the figure below use 4 screws of No. A in pack list to lock the VESA BKT to the machine. Depending on your needs, you can choose between using 75\*75 mm or 100\*100 mm of VESA mount.

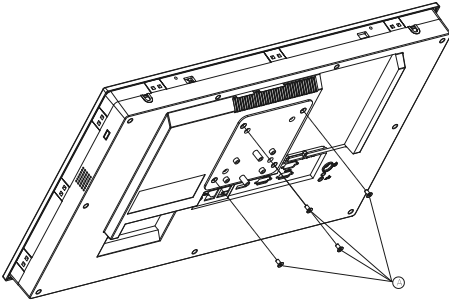


**Step 2:** As the figure below shows, use 4 screws of No. A in pack list to lock on the base plate.

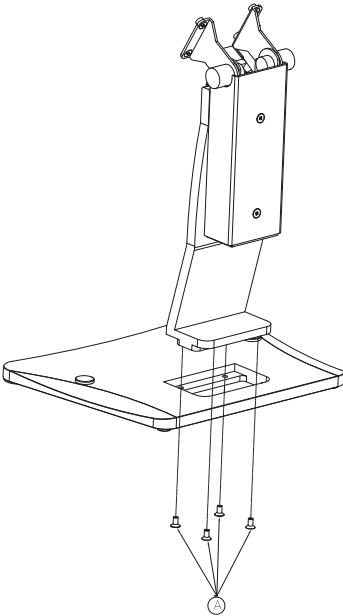

**Step 3:** As the figure below shows use 4 screws of No. B in the pack list to secure the VESA Bracket.

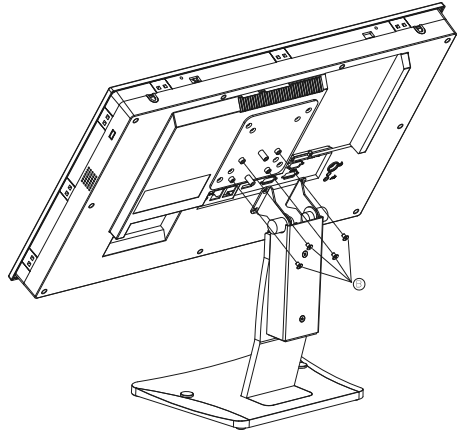

**Step 4:** As the figure below shows, use 1 x No. C screw in the pack list to secure the hinge cover.

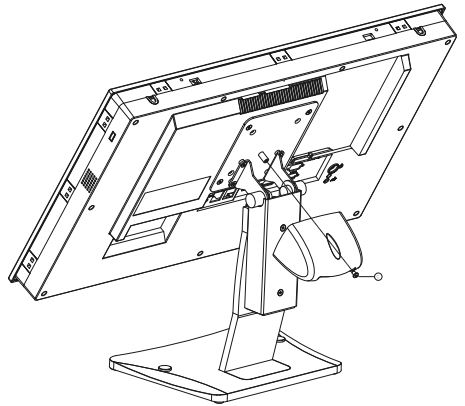

Completed view of PPC-STAND-A1E plus a PPC machine

