

# DAQami

## Measurement Computing Hardware Supported by DAQami™

The following table lists the Measurement Computing hardware products supported by the latest version of DAQami.

OEM variants and compatible expansion devices are also supported.

- |                      |                  |                 |
|----------------------|------------------|-----------------|
| ▪ BTH-1208LS         | ▪ USB-1608HS     | ▪ USB-3110      |
| ▪ E-1608*            | ▪ USB-1608HS-2AO | ▪ USB-3112      |
| ▪ E-DIO24*           | ▪ USB-1616FS     | ▪ USB-3114      |
| ▪ E-TC*              | ▪ USB-2001-TC    | ▪ USB-5201†     |
| ▪ miniLAB 1008       | ▪ USB-201        | ▪ USB-5203‡     |
| ▪ SC-1608-2AO-ENET*  | ▪ USB-202        | ▪ USB-7202      |
| ▪ SC-1608-USB        | ▪ USB-2020       | ▪ USB-7204      |
| ▪ SC-1608X-2AO-USB   | ▪ USB-204        | ▪ USB-CTR04     |
| ▪ SC-1608X-USB       | ▪ USB-205        | ▪ USB-CTR08     |
| ▪ SwitchAndSense-8/8 | ▪ USB-231        | ▪ USB-DIO24/37  |
| ▪ TC-32*             | ▪ USB-234        | ▪ USB-DIO24H/37 |
| ▪ USB-1024HLS        | ▪ USB-2408*      | ▪ USB-DIO32HS   |
| ▪ USB-1024LS         | ▪ USB-2408-2AO*  | ▪ USB-DIO96H    |
| ▪ USB-1208FS         | ▪ USB-2416*      | ▪ USB-DIO96H/50 |
| ▪ USB-1208FS-Plus    | ▪ USB-2416-4AO*  | ▪ USB-ERB08     |
| ▪ USB-1208HS         | ▪ USB-2623       | ▪ USB-ERB24     |
| ▪ USB-1208HS-2AO     | ▪ USB-2627       | ▪ USB-PDISO8    |
| ▪ USB-1208HS-4AO     | ▪ USB-2633       | ▪ USB-PDISO8/40 |
| ▪ USB-1208LS         | ▪ USB-2637       | ▪ USB-SSR08     |
| ▪ USB-1408FS         | ▪ USB-3101FS     | ▪ USB-SSR24     |
| ▪ USB-1408FS-Plus    | ▪ USB-3101       | ▪ USB-TC        |
| ▪ USB-1608FS         | ▪ USB-3102       | ▪ USB-TC-AI     |
| ▪ USB-1608FS-Plus    | ▪ USB-3103       | ▪ USB-TEMP*     |
| ▪ USB-1608G          | ▪ USB-3104       | ▪ USB-TEMP-AI*  |
| ▪ USB-1608GX         | ▪ USB-3105       |                 |
| ▪ USB-1608GX-2AO     | ▪ USB-3106       |                 |

---

\* Some device features must be configured using InstaCal™.

- For multi-sensor temperature devices, this includes configuring RTD, thermistor, and semiconductor measurements.
- For Ethernet devices, this includes the connection code stored on the device, alarm options, and other network settings.

† DAQami only supports USB-5200 Series devices that are connected by USB. Data logging mode is not supported.