



User Manual

ACP-1010

**1U Rackmount Chassis for
ATX / MicroATX Motherboard or
SHB / SBC**

Trusted ePlatform Services

ADVANTECH

Copyright

The documentation and the software included with this product are copyright 2009 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

ACP-1010, ACP-1010MB, PCE-7B03V, PCE-5B03V, PCA-6103P2V, AIMB-766, AIMB-764, AIMB-762, AIMB-760, AIMB-750, AIMB-744, AIMB-742, AIMB-556 and AIMB-554 are trademarks of Advantech Co., Ltd.

All other product names or trademarks are properties of their respective owners.

On-line Technical Support

For technical support and service, please visit our support website at:
<http://www.advantech.com/support>

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this user manual for later reference.
3. Disconnect this equipment from AC outlet before cleaning. Do not use liquid or spray detergents for cleaning.
4. For pluggable equipment, the power outlet shall be installed near the equipment and shall be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall could cause damage.
7. Do not leave this equipment in an environment unconditioned where the storage temperature under 0° C (32° F) or above 40° C (104° F), it may damage the equipment.
8. The openings on the enclosure are for air convection hence protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
9. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
10. Place the power cord in a way that people can not step on it. Do not place anything over the power cord. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.
11. All cautions and warnings on the equipment should be noted.
12. If the equipment is not used for a long time, disconnect it from the power source to avoid being damaged by transient over-voltage.
13. Never pour any liquid into ventilation openings. This could cause fire or electrical shock.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If any of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well or you cannot get it to work according to user manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
16. **CAUTION:** The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.
17. **THE COMPUTER IS PROVIDED WITH CD DRIVES COMPLY WITH APPROPRIATE SAFETY STANDARDS INCLUDING IEC 60825.**

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT

18. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
19. CAUTION: Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges.
20. CAUTION: Always ground yourself to remove any static charge before touching the motherboard, backplane, or add-on cards. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis.
21. CAUTION: Any unverified component could cause unexpected damage. To ensure the correct installation, please always use the components (ex. screws) provided with the accessory box.

A Message to the Customer

Advantech customer services

Each and every Advantech product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Advantech equipment is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Advantech has come to be known. Your satisfaction is our primary concern. Here is a guide to Advantech's customer services.

To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical support

We want you to get the best performance possible from your products. If you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone.

Please consult this manual first. If you still cannot find the answer, gather all the information or questions that apply to your problem, and with the product close at hand, call your dealer. Our dealers are well trained and ready to give you the support you need to get the most from your Advantech products. In fact, most problems reported are minor and can be easily solved over the phone.

In addition, free technical support is available from Advantech engineers every business day. We are always ready to give advice about application requirements or specific information on the installation and operation of any of our products.

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Initial Inspection

When you open the carton, please make sure that the following materials have been shipped:

- ACP-1010 Chassis
- User Manual
- Warranty Card
- Accessory box with a package of screws (for fastening the backplane / motherboard, disk drives), two M/B I/O shields for ACP-1010MB.

If any of these items are missing or damaged, contact your distributor or sales representative immediately. We have carefully inspected the ACP-1010 mechanically and electrically before shipment. It should be free of marks and scratches and in perfect working order upon receipt. As you unpack the ACP-1010, check it for signs of shipping damage. (For example, damaged box, scratches, dents, etc.) If it is damaged or it fails to meet the specifications, notify our service department or your local sales representative immediately. Also notify the carrier. Retain the shipping carton and packing material for inspection by the carrier. After inspection, we will make arrangements to repair or replace the unit.

Contents

Chapter 1	General Information	1
1.1	Introduction	2
1.2	Specifications	2
1.3	Power Supply Options.....	3
	Table 1.1: Power supply options for BACKPLANE version	3
	Table 1.2: Power supply options for MOTHERBOARD version ..	3
1.4	Environmental Specifications	3
	Table 1.3: Environmental specifications	3
1.5	Dimension Diagram.....	4
	Figure 1.1 Dimension diagram for ACP-1010BP	4
	Figure 1.2 Dimension diagram for ACP-1010MB	4
Chapter 2	System Setup	5
2.1	Introduction	6
2.2	Removing the Top Cover	6
	Figure 2.1 Removing the top cover	6
2.3	Installing the Backplane and the CPU Card	7
	Figure 2.2 Installing a backplane	7
	Figure 2.3 Installing a CPU card and add-on card.....	8
2.4	Installing the Motherboard and Riser Card	9
	Figure 2.4 Yellow label indicating stand-off locations	9
	Figure 2.5 Stand-off spacer	9
	Figure 2.6 Installing a motherboard	10
	Figure 2.7 Installing a riser card and add-on cards	10
2.5	Installing Disk Drives.....	11
	Figure 2.8 Small converter for ATA (IDE) slim-type ODD.....	11
	Figure 2.9 Installing a slim ODD & HDD / FDD	11
	Figure 2.10 Installing a 3.5" or 2.5" HDD in ACP-1010BP.....	12
	Figure 2.11 Installing a 3.5" or 2.5" HDD in ACP-1010MB	12
Chapter 3	Operation.....	13
3.1	The Front Panel	14
	Figure 3.1 Front view with door closed	14
	Figure 3.2 Front view with door open	14
3.1.1	Switch, Button and I/O Interfaces	14
3.1.2	LED indicators.....	15
	Table 3.1: LED indicator functions.....	15
3.2	Replacing the Cooling Fan.....	16
	Figure 3.3 Replacing a cooling fan for ACP-1010BP.....	16
	Figure 3.4 Replacing a cooling fan for ACP-1010MB	16
3.3	Replacing the Filter	17
	Figure 3.5 Replacing the filter	17
3.4	Replacing the power supply	18
	Figure 3.6 Replacing the power supply for ACP-1010BP.....	18
	Figure 3.7 Replacing the power supply for ACP-1010MB	19
Chapter 4	Alarm Board	21
4.1	Introduction	22
4.2	Alarm Board Layout	22

	Figure 4.1 Alarm board layout	22
4.3	Alarm Board Specifications	22
4.3.1	Connector, Jumper and Pin Definitions	23
	Table 4.1: CN1, Auxiliary external power connector, standard mini 4-Pin power connector	23
	Table 4.2: CN4, Thermal sensor (LM75) connector	23
	Table 4.3: CN13, Voltage detect input connector	23
	Table 4.4: CN16, Power good input connector	23
	Table 4.5: CN17, Alarm reset connector	23
	Table 4.6: CN18, Output connector to LED board	23
	Table 4.7: CN26, External HDD LED connector	23
	Table 4.8: FAN1~FAN7, Fan connectors	23
	Table 4.9: J1, External buzzer	23
	Table 4.10: SW1, Fan number select switch	23
4.3.2	Switch Settings	24
	Table 4.11: SW1. Fan number setting	24
4.4	Thermal Sensor	24
	Figure 4.2 Thermal sensor location in ACP-1010BP	24
	Figure 4.3 Thermal sensor location in ACP-1010MB	25
	Figure 4.4 Thermal sensor module	25
	Table 4.12: CN1 & CN2, Temperature sensor connector	26
	Table 4.13: SW1, Thermal sensor I.D. number settings	26

Appendix A Exploded Diagram & Parts List 27

A.1	Exploded Diagram	28
	Figure A.1 Exploded Diagram of ACP-1010BP	28
	Table A.1: Parts List	28
	Figure A.2 Exploded Diagram of ACP-1010MB	29
	Table A.2: Parts List	29

Appendix B Backplane, Motherboard and Riser Card Options 31

B.1	Backplane Options	32
	Table B.1: PICMG1.3 Backplane Options	32
	Table B.2: PICMG1.0 Backplane Options	32
B.2	Motherboard and Riser Card Options	32
	Table B.3: ATX Motherboard Options	32
	Table B.4: MicroATX motherboard options	33
	Table B.5: Riser Card Options	33

Chapter 1

General Information

This chapter provides general information about the ACP-1010.

Sections include:

- Introduction
- Specifications
- Power supply options
- Environmental specifications
- Dimension diagram

1.1 Introduction

ACP-1010 is a compact, rugged 19" rackmount industrial computer chassis designed for space-conscious applications. Only 1U in height, the ACP-1010 can accept versatile 3-slot passive backplanes and two full-size PCI cards via backplanes. The ACP-1010MB can accept one PCI or PCIe add-on card via the riser card.

Unique alarm detection and notification to reduce system down time

ACP-1010 has a unique alarm module. This module automatically detects system operating conditions, such as HDD, FAN, and system temperature, and it shows the system status via the front LED indicators. If any sort of failure happens, the module gives both audible and visible alarms to notify users to take the necessary actions.

And more

ACP-1010 supports either a 250 W or a 300 W ATX 1U power supply. Streamlined with an efficient cooling design, the in-chassis airflow keeps the system from overheating. All these outstanding features make ACP-1010 the best choice for price, performance, and total cost of ownership.

1.2 Specifications

- **Construction:** Heavy-duty steel
- **Disk drive capacity:** One slim-type optical disk drive, and two 3.5" drive bays for FDD and HDD
- **I/O interfaces on front panel:** Dual USB ports
- **I/O interfaces on rear panel:** One D-SUB 9-pin opening for MB version
- **Indicators on front panel:** LEDs for Power, HDD, TEMP, FAN LAN 1 and LAN 2
- **Switches on front panel:** ATX system switch, system reset and alarm reset
- **Cooling fans:**
 - MB version: two 4 cm x 4 cm (24 CFM) cooling fans
 - BP version: Three 4 cm x 4 cm (24 CFM) + one 4 cm x 4 cm (15 CFM) cooling fans
- **Expansion:**
 - MB: One add-on card via the riser card
 - BP: two full-sized add-on cards
- **Weight:** 8 Kg (17.6 lb)
- **Dimensions (W x H x D):** 480 mm x 44 mm x 500 mm (19" x 1.7" x 19.7")

1.3 Power Supply Options

Table 1.1: Power supply options for BACKPLANE version

Model Name	1757001797	1757000160G
Watt	250 W max. (ATX, PFC) (single power)	300 W (ATX, PFC) (single power)
Input Rating	100 ~ 240 Vac (Full range)	100 ~ 240 Vac (Full range)
Output Voltage	+5 V @ 23 A, +3.3 V @ 14 A, +12 V @ 16 A, -12 V @ 0.5 A, -5 V @ 0.2 A, +5 Vsb @ 2 A	+5 V @ 25 A, +3.3 V @ 14 A, +12 V @ 16 A, -12 V @ 1 A, -5 V @ 0.5 A, +5 Vsb @ 2 A
Minimum Load	+5 V @ 3 A, +3.3 V @ 1 A, +12 V @ 2 A, -12 V @ 0.1 A, -5 V @ 0 A, +5 Vsb @ 0.1 A	+5 V @ 3 A, +3.3 V @ 1 A, +12 V @ 2 A, -12 V @ 0.05 A, -5 V @ 0.05 A, +5 Vsb @ 0.1 A
MTBF	114,000 hours @ 25° C	100,000 hours @ 25° C
Safety	CE/UL/TUV/CB/CCC	CE/UL/TUV/CB/CCC

Table 1.2: Power supply options for MOTHERBOARD version

Model Name	1757001457	1757000263
Watt	250 W max. (ATX, PFC) (single power)	300 W (ATX, PFC) (single power)
Input Rating	100 ~ 240 V _{AC} (Full range)	100 ~ 240 V _{AC} (Full range)
Output Voltage	+5 V @ 23 A, +3.3 V @ 14 A, +12 V @ 16 A, -12 V @ 0.5 A, -5 V @ 0.2 A, +5 Vsb @ 2 A	+5 V @ 25 A, +3.3 V @ 14 A, +12 V @ 16 A, -12 V @ 1 A, -5 V @ 0.5 A, +5 Vsb @ 2 A
Minimum Load	+5 V @ 3 A, +3.3 V @ 1 A, +12 V @ 2 A, -12 V @ 0.1 A, -5 V @ 0 A, +5 Vsb @ 0.1 A	+5 V @ 3 A, +3.3 V @ 1 A, +12 V @ 2 A, -12 V @ 0.05 A, -5 V @ 0.05 A, +5 Vsb @ 0.1 A
MTBF	114,000 hours @ 25° C	100,000 hours @ 25° C
Safety	CE/UL/TUV/CB/CCC	CE/UL/TUV/CB/CCC

1.4 Environmental Specifications

Table 1.3: Environmental specifications

Environment	Operating	Non-operating
Temperature	0 to 40° C (32 to 104° F)	-20 to 60° C (-4 to 140° F)
Humidity	10 to 85% @ 40° C non-condensing	10 to 95% @ 40° C non-condensing
Vibration (5 ~ 500Hz)	0.5G rms	2 G
Shock	10 G (with 11 ms duration, half sine wave)	30 G
Safety	CE compliant	

1.5 Dimension Diagram

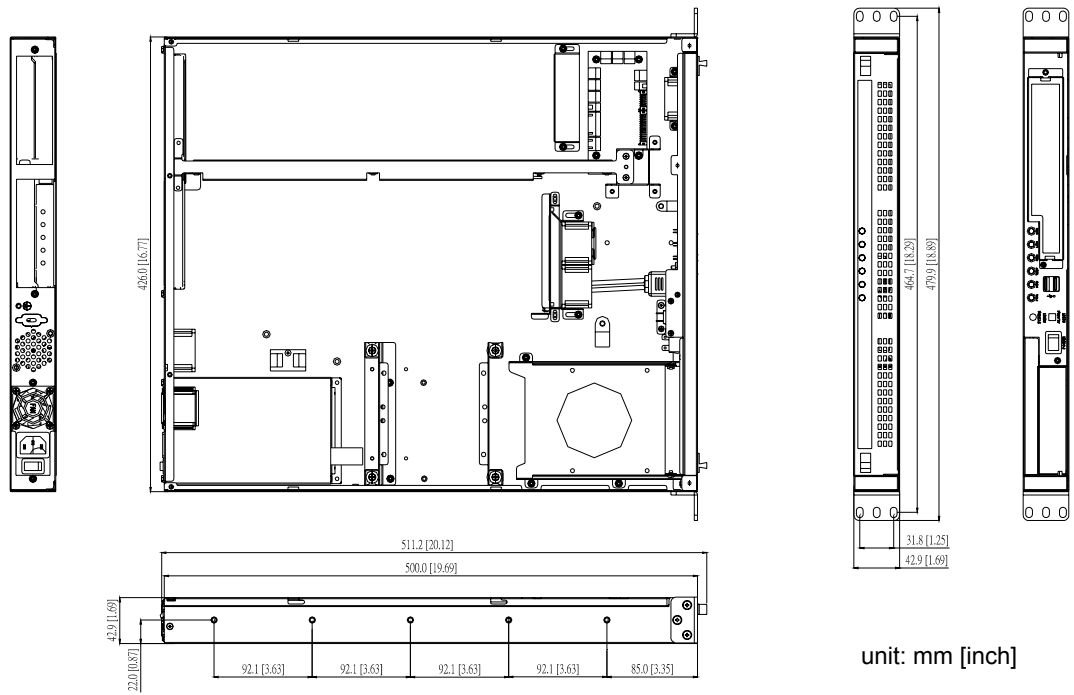


Figure 1.1 Dimension diagram for ACP-1010BP

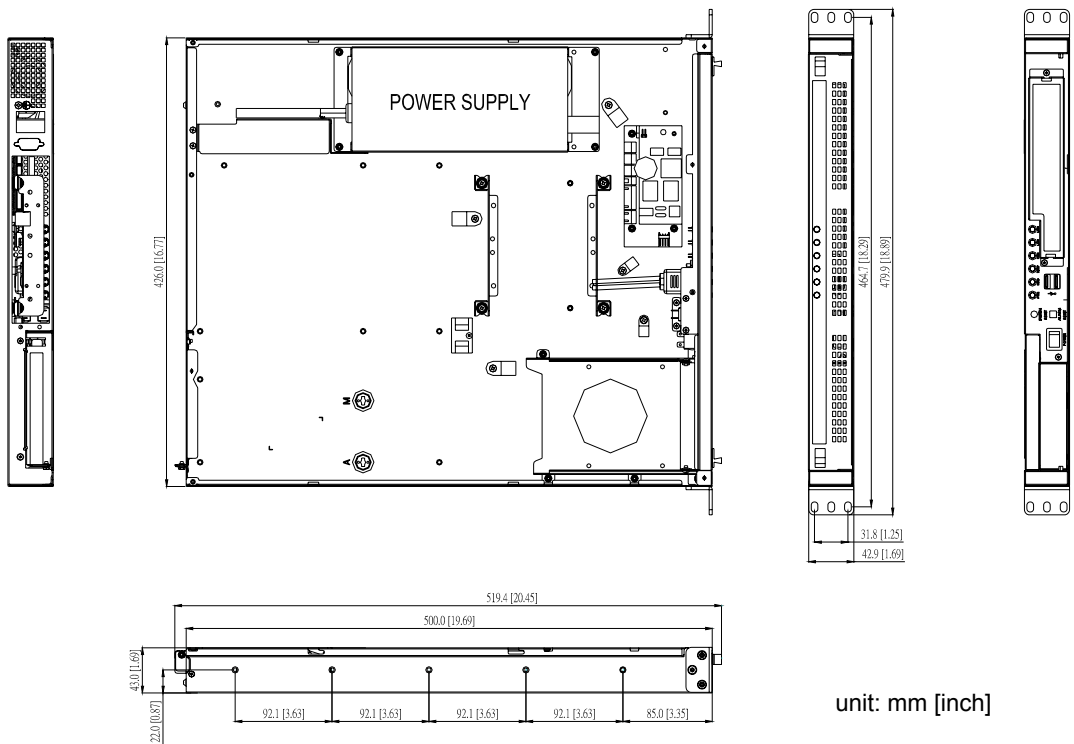


Figure 1.2 Dimension diagram for ACP-1010MB

Chapter 2

System Setup

This chapter introduces the installation process.

Sections include:

- Installing a backplane & CPU Card
- Installing a motherboard & a Riser Card
- Installing add-on cards
- Installing disk drives

2.1 Introduction

The following procedures are provided to assist you in installing a backplane, CPU card, motherboard, riser card, disk drives, and add-on cards into the chassis. Please also refer to the Appendix A, Exploded Diagram, for the parts naming in this manual.

2.2 Removing the Top Cover

To remove the top cover of the ACP-1010, please refer to Figure 2.1. Remove screws; slide cover back; lift cover up.

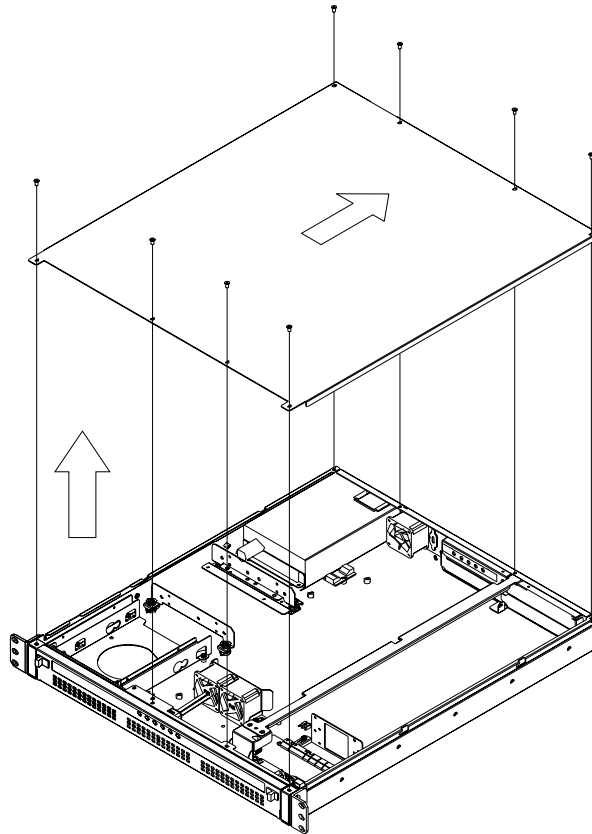


Figure 2.1 Removing the top cover

2.3 Installing the Backplane and the CPU Card

ACP-1010 accepts a 3-slot backplane. To install the backplane, refer to the figures and proceed as follows:

Note! To ensure the best air flow inside the chassis, choosing a CPU cooler which is lower than 22 mm is highly recommended.



1. Remove the backplane (T-bar) holder and then fix the backplane onto it with screws. (Figure 2.2)
2. Insert the CPU card (with CPU, cooler, RAM and necessary cables installed) into the slot on the backplane. Then fasten the card guide with screws. (Figure 2.3)
3. Insert the PCI/PCIe add-on card to the proper slot on the backplane and then fixed it solidly.
4. Carefully replace the whole kit into the chassis and fasten it with the screws provided.
5. Plug in the 20/24-pin ATX power connector and +12 V power connector from the power supply, also the 9-pin USB connectors from the front panel of the chassis.
6. Connect the POWER SW, RESET SW, LAN LED from chassis to the backplane and HDD LED cables from the alarm board to the backplane.

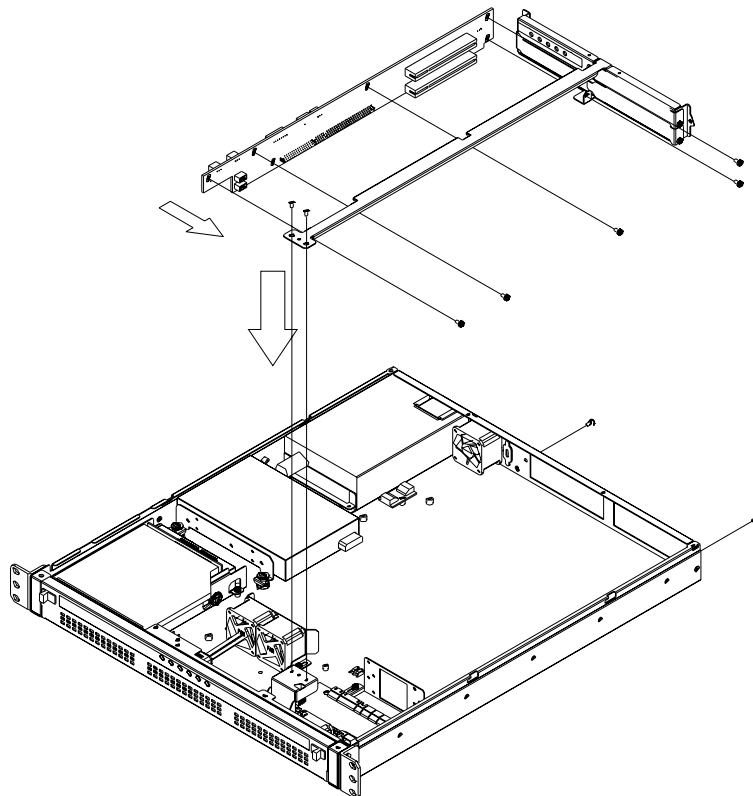


Figure 2.2 Installing a backplane

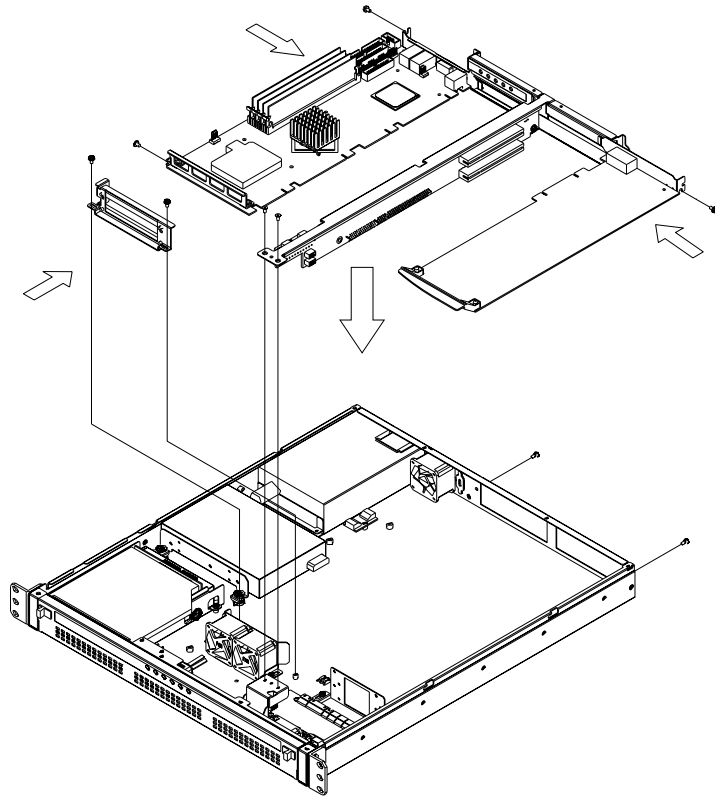


Figure 2.3 Installing a CPU card and add-on card

2.4 Installing the Motherboard and Riser Card

ACP-1010MB supports a variety of Advantech ATX or microATX motherboards. It can support an add-on card via the riser card. To install the motherboard and riser card, please refer to the following steps:

1. A yellow label is located inside the chassis bottom. (see Figure 2.4) It shows the stand-off spacer location for attaching specific ATX / MicroATX motherboards. Users can find the stand-off spacer in the accessory box (see Figure 2.5). Be sure to follow the instructions and fasten the motherboard onto the chassis with the correct stand-off spacer location.

MODEL	MARK	
	A	M
AIMB-744 AIMB-750 AIMB-760		
AIMB-740 AIMB-742 AIMB-762 AIMB-764	*	
AIMB-554 AIMB-556 AIMB-560		*

The STAND-OFF bracket is in the accessory box. Be sure to attach the necessary bracket on the chassis .

Figure 2.4 Yellow label indicating stand-off locations




Figure 2.5 Stand-off spacer

2. The accessory attaches 2 motherboard I/O shields. Choose the correct one to be installed on the rear plate of the chassis.
3. Fix the motherboard in the chassis with screws.
4. Plug in the 20/24-pin ATX power connector and +12 V power connector from the power supply, also the 9-pin USB connectors from the front panel of the chassis.
5. Connect the POWER SW, RESET SW, LAN LED from chassis to mother board and HDD LED cables from the alarm board to the motherboard.

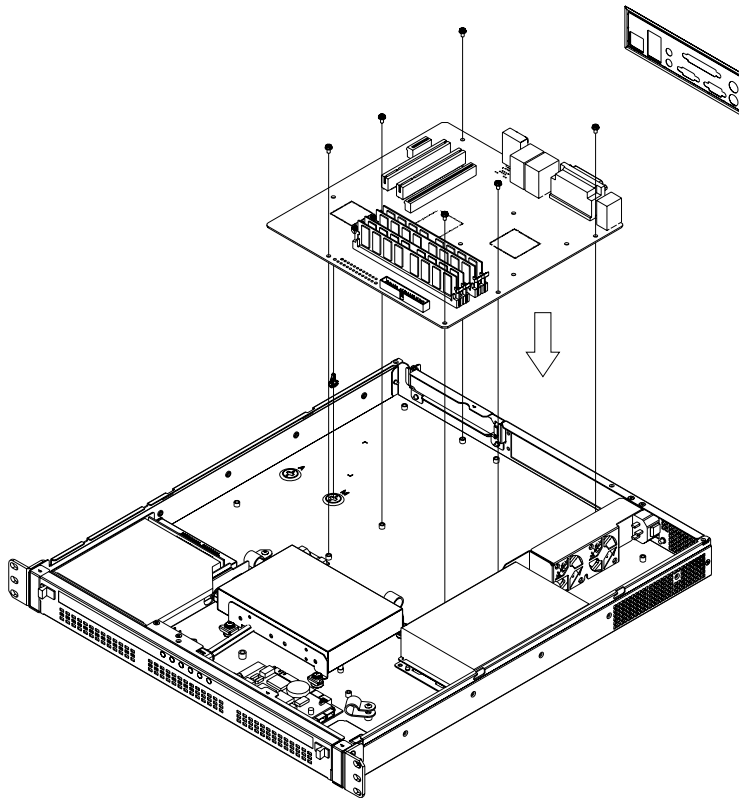


Figure 2.6 Installing a motherboard

6. If customer purchases a riser card, then insert it on the 6th slot of the ATX motherboard or the 3rd slot of the microATX motherboard.
7. Insert the add-on card to the slot on the riser card, then fasten it to the rear plate of the chassis.

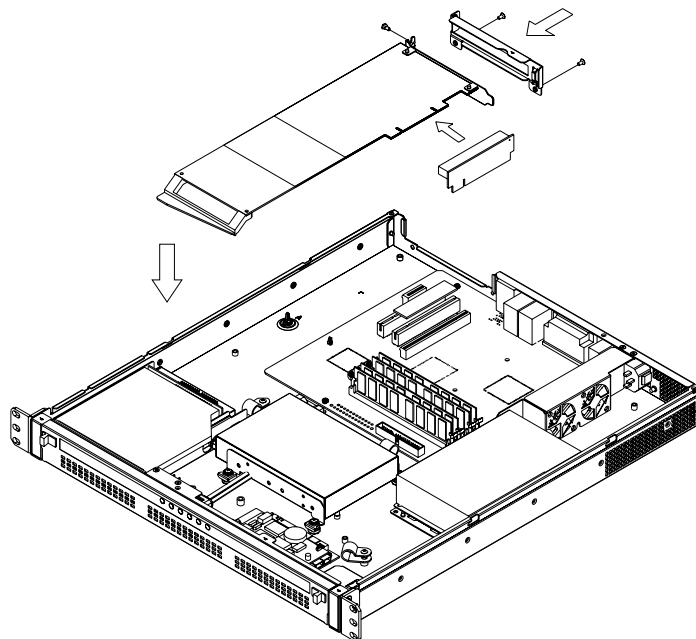


Figure 2.7 Installing a riser card and add-on cards

2.5 Installing Disk Drives

ACP-1010 comes with two 3.5" disk drive bays for HDD and FDD. It also accepts one slim type optical disk drive. To install any of these disk drives, please proceed as follows:

1. Open the front cover by pushing the latches.
2. Remove the four screws, which mount the slim-type optical disk drive and 3.5" HDD brackets on the chassis.
3. Insert the hard drive disk into the proper location in the drive bay and fix it with 4 screws. It's also flexible to fix two 2.5" HDD instead of one 3.5" HDD. (see Figure 2.10)
4. Connect a suitable cable from the CPU card / motherboard to an IDE or a SATA HDD.
5. Purchase a small PCB converter (see Figure 2.8) and connect it to the ATA (IDE) slim-type ODD. Then fix it in place by tightening the two screws provided. Or purchase a SATA power wire to connect it to the SATA slim-type ODD.
6. Insert slim-type optical disk drive into the proper location, and fix it with 4 screws.
7. Insert the proper power connector into each drive.
8. Return the HDD drive and slim-type optical disk drive with the bracket on the chassis and fix it with four screws.



Figure 2.8 Small converter for ATA (IDE) slim-type ODD

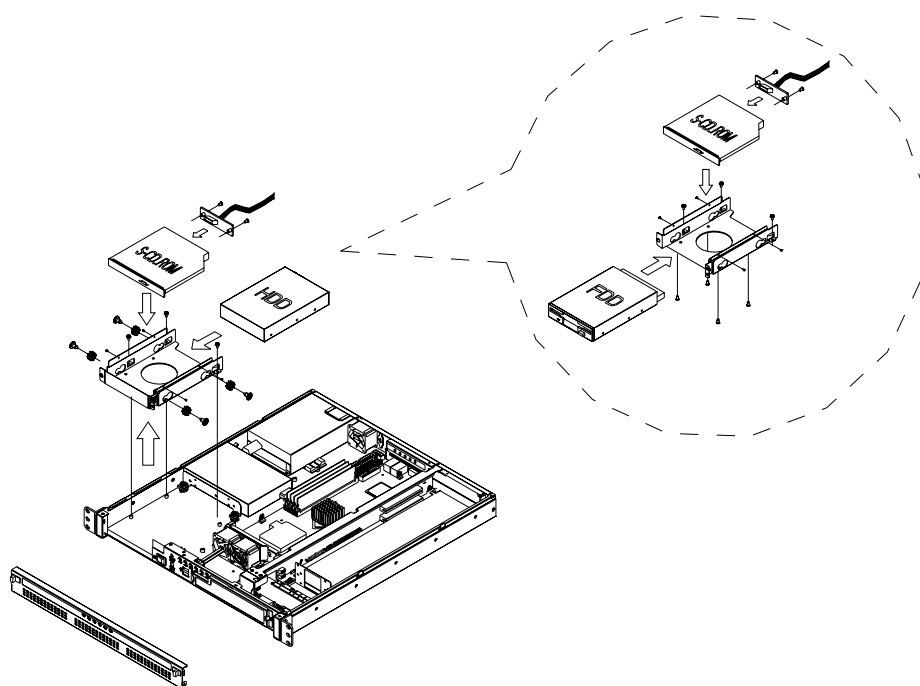


Figure 2.9 Installing a slim ODD & HDD / FDD

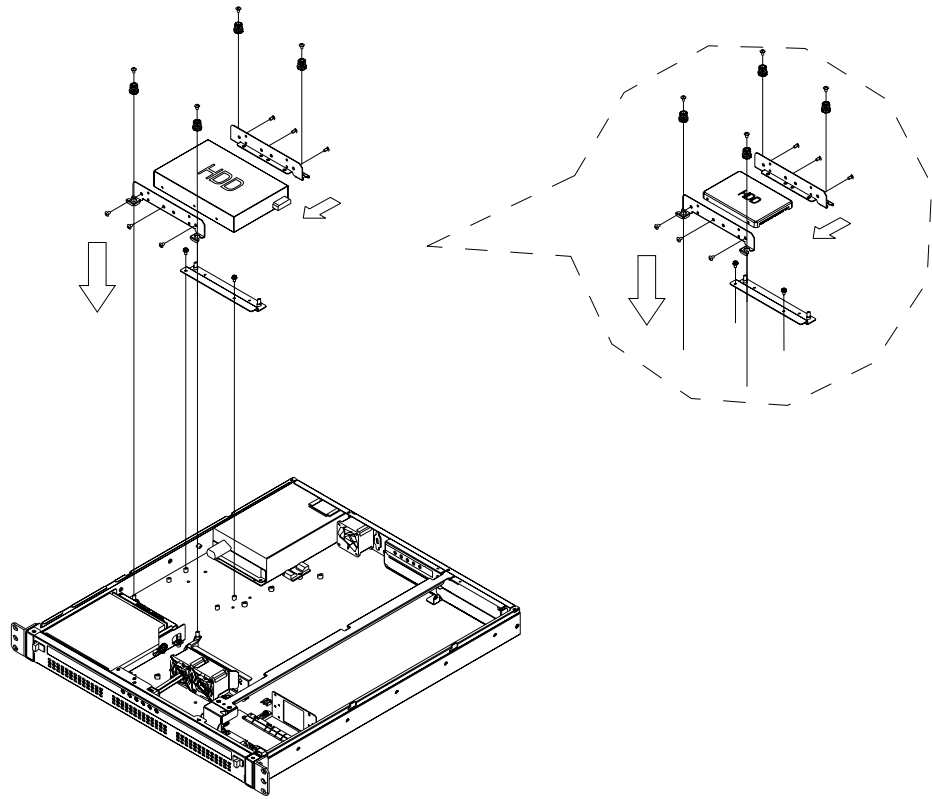


Figure 2.10 Installing a 3.5" or 2.5" HDD in ACP-1010BP

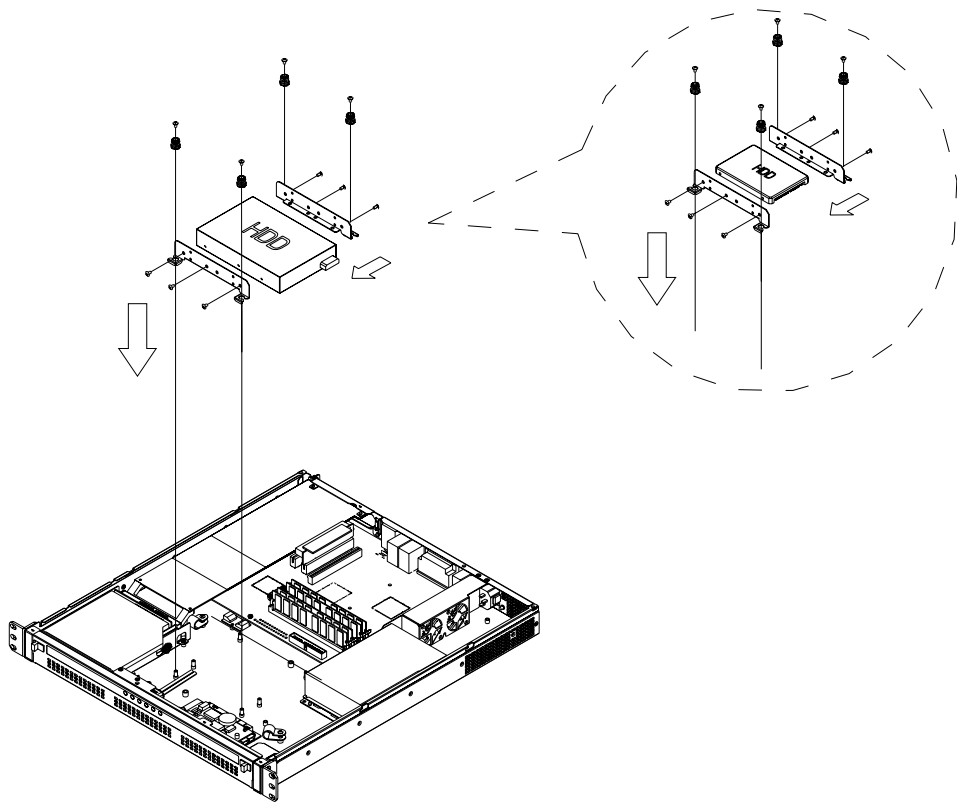


Figure 2.11 Installing a 3.5" or 2.5" HDD in ACP-1010MB

Chapter 3

Operation

This chapter introduces system operation information.

Sections include:

- The front panel
- Replacing the cooling fan
- Replacing the filter
- Replacing the power supply

3.1 The Front Panel

The front panel features six LED indicators. The door is fitted with a user-friendly latch. When the door is open, one sees a momentary power switch, a System Reset button, an Alarm Reset button, and a dual USB port. Their individual functions are described below.




Figure 3.1 Front view with door closed




Figure 3.2 Front view with door open

3.1.1 Switch, Button and I/O Interfaces

Momentary Power switch:

Press this switch to turn the system power on or off. Please use system shutdown or press this switch for few seconds to turn off the system ATX power.

System Reset button:

Press this button to reboot the system.

Alarm Reset button:






If a fault occurs in the system (e.g., fan failure, or the chassis is overheated), the audible alarm will be activated. Pressing this button will stop the alarm from beeping.

Dual USB ports:

For connecting a wide range of USB devices for data transfer, backup or input.

3.1.2 LED indicators

Six LEDs are placed in the middle of the front panel to indicate system health and activity. Please refer to Table 3.1 for the LED definition summary.

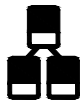Table 3.1: LED indicator functions				
LED	Description	Green	Red	Orange
Power				
	System power	Normal	N/A	N/A
Fan				
	Cooling fan status	Normal	Abnormal	N/A
Temperature				
	Temperature in the chassis	Normal	Abnormal	N/A
Hard Disk				
	Hard disk drive activity	N/A	No light	Normal
LAN				
	LAN1 & LAN2 status	Normal		
	Data transmit through LAN	Blinking	No light	N/A

When the system power is on, the power LED stays **GREEN**.

When the fan LED is **RED**, it indicates a cooling fan problem; the audible alarm is also activated. To stop the alarm beep, press the **Alarm Reset** button and replace the failed fan with a good one immediately.

If the temperature LED is **RED**, it means that the inside of the chassis has overheated (more than 50° C). An audible alarm will be activated. To stop the alarm beep, press the **Alarm Reset** button. Inspect the fan filter and the rear section of the chassis immediately. Make sure the airflow inside the chassis is smooth and not blocked by dust or other particles.

When data is transmitting, the HDD LED blinks **ORANGE**.

If the LAN1/LAN2 LED stays **GREEN**, it means the network connection is working normally. When data is transmitting through the network, the LAN LED blinks. If the LAN1/LAN2 LED fails to light up, inspect the LAN cable and the connections.

3.2 Replacing the Cooling Fan

There are three cooling fans located near the front, and one located near the rear of the ACP-1010BP chassis; and there are two fans close to the rear window of the ACP-1010MB chassis. To replace a cooling fan, please proceed as below.

1. Un-plug the fan power connector.
2. Remove the screws which mount the fan bracket on the chassis, and take it out.
3. Remove the guard that protects the failed fan.
4. Fasten the guard onto a new fan, then attach it onto the fan bracket with screws.
5. Return the fan unit to the chassis and fasten it with screws.
6. Plug in the fan power connector.

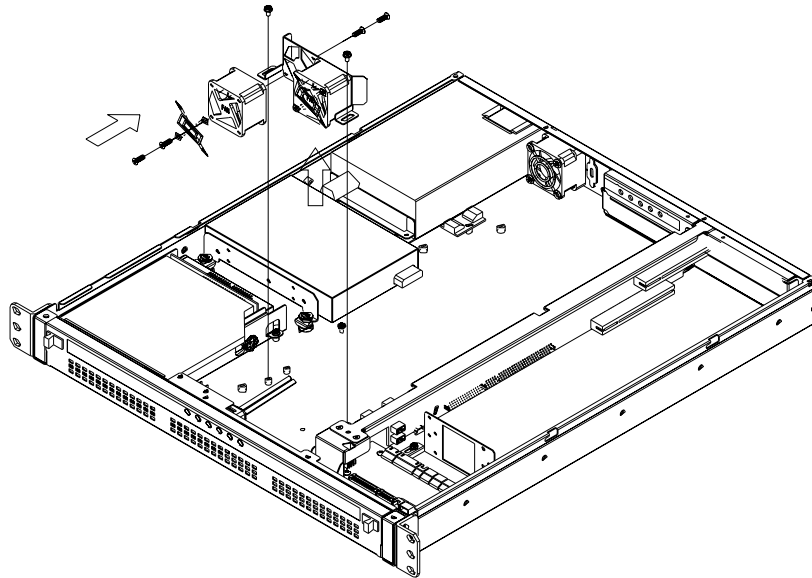


Figure 3.3 Replacing a cooling fan for ACP-1010BP

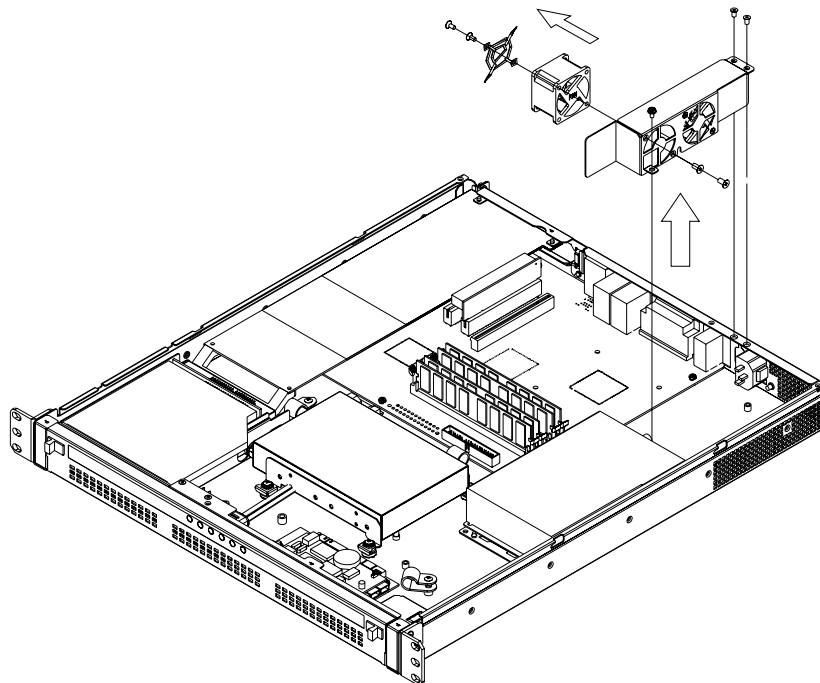


Figure 3.4 Replacing a cooling fan for ACP-1010MB

3.3 Replacing the Filter

The filter blocks dust or particles from the work environment and helps extend the longevity of the system. It's better to clean the filters periodically. There is an easy-to-maintain filter behind the front cover. To replace the filter, proceed as follows.

1. Open the front cover.
2. Unscrew the filter cover by loosening the screws. (see Figure 3.5)
3. Replace it with a new one. Then return the filter cover and fasten it.

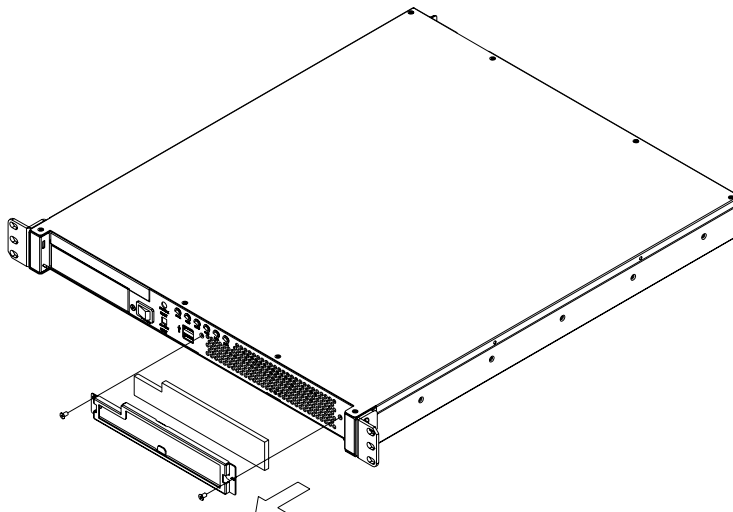


Figure 3.5 Replacing the filter

3.4 Replacing the power supply

ACP-1010 supports a single, 1U power supply. To change the power supply, please proceed as follows:

1. Un-plug the AC inlet from the power supply.
2. Remove the top cover.
3. Unplug the ATX power connector and +12V power connector from the CPU card / motherboard, and the peripheral power connector(s) from the drive disk(s).
4. Remove the two screws that mount the power supply bracket to the chassis, and the two other screws that mount the fan bracket on the chassis, then lift out the power supply.
5. Place a new power supply into the chassis and fasten it with the four screws.
6. Plug the ATX power connector and +12V power connector to the CPU card, and the peripheral power connector(s) to the proper drive disks.
7. Return the top cover and plug in the AC inlet.

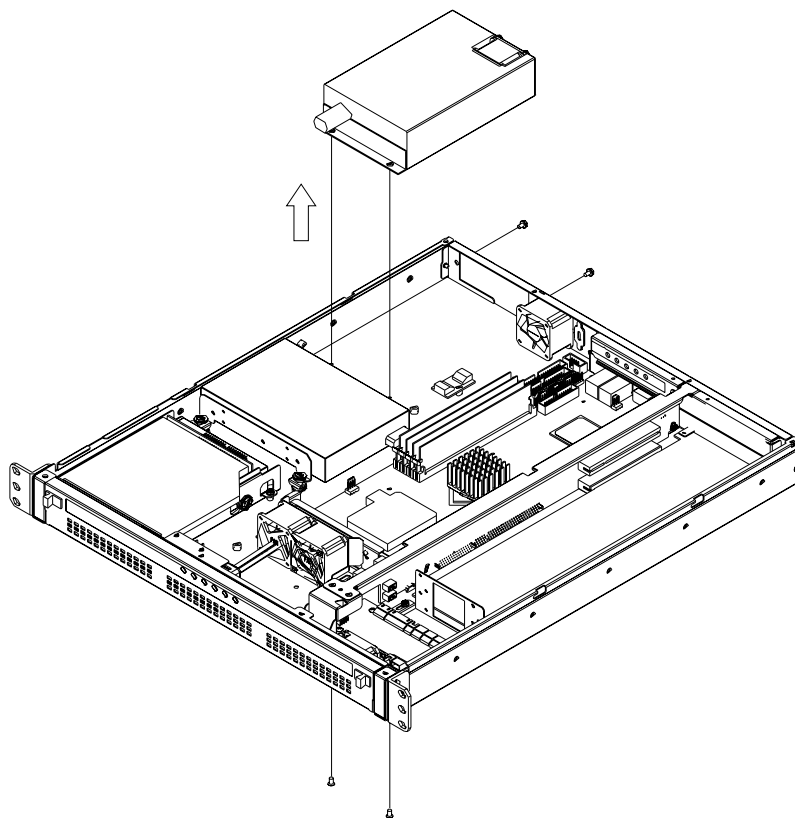


Figure 3.6 Replacing the power supply for ACP-1010BP

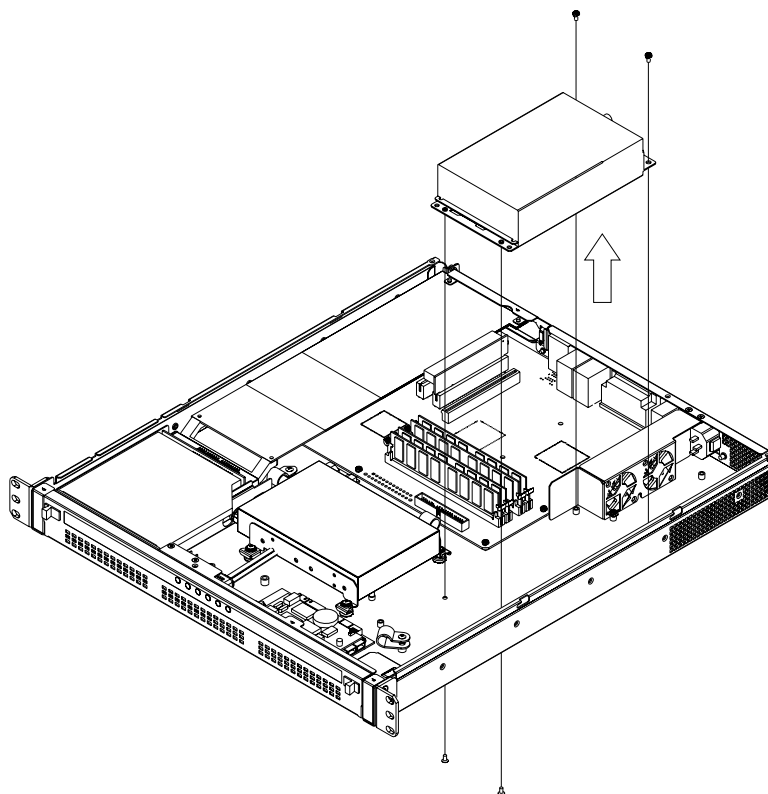


Figure 3.7 Replacing the power supply for ACP-1010MB

Chapter 4

Alarm Board

This chapter introduces the alarm board and thermal sensor specifications.

Sections include:

- Alarm board layout
- Alarm board specifications
- Thermal sensor
- Sensor I.D. number setting

4.1 Introduction

The alarm board is located in the middle section, between the driver bay and the power supply. The alarm board gives an audible alarm when:

- A cooling fan fails
- Chassis internal temperature is too high

To stop the alarm beep, simply press the Alarm Reset button on the front panel, then take the necessary actions to remedy the situation.

4.2 Alarm Board Layout

The layout and detailed specifications of the alarm board are given below:

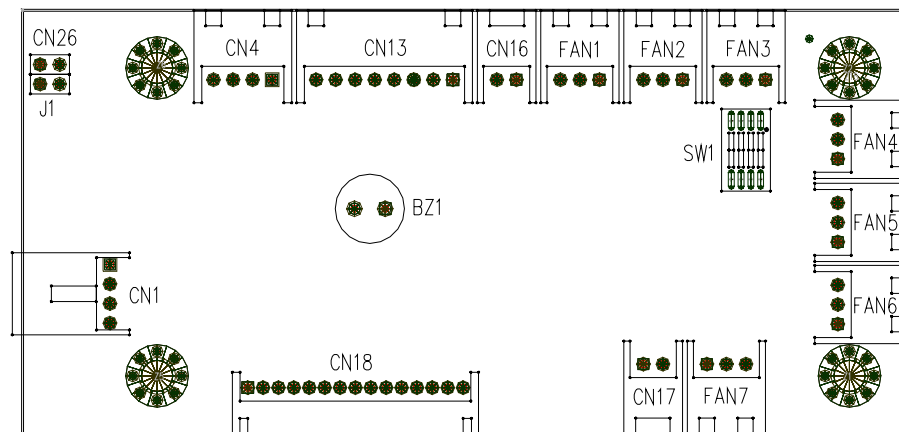


Figure 4.1 Alarm board layout

4.3 Alarm Board Specifications

Input Power: +5 V, +12 V

Input Signals:

- 7 fan connectors
- One 'thermal sensor' connector (supports up to 8 thermal sensors in series)
- One 'power good' input
- One 'alarm reset' input
- One 'voltage signal' connector (connect from the backplane, and support six voltages: ± 12 V, ± 5 V, +3.3V, +5 Vsb)
- One 'hard disk LED' connector (connect from the CPU card or the motherboard)

Output Signals:

- One 'LED board' connector
- One 'buzzer' output

4.3.1 Connector, Jumper and Pin Definitions

Table 4.1: CN1, Auxiliary external power connector, standard mini 4-Pin power connector

Pin 1	+12 V	Pin 3	GND
Pin 2	GND	Pin 4	+5 V

Table 4.2: CN4, Thermal sensor (LM75) connector

Pin 1	+5 V	Pin 3	T_SDAT
Pin 2	T_SCLK	Pin 4	GND

Table 4.3: CN13, Voltage detect input connector

Pin 1	+5 Vsb	Pin 5	+5 V
Pin 2	GND	Pin 6	+3.3 V
Pin 3	GND	Pin 7	-12 V
Pin 4	-5 V	Pin 8	+12 V

Table 4.4: CN16, Power good input connector

Pin 1	Power Good	Pin 2	GND
-------	------------	-------	-----

Table 4.5: CN17, Alarm reset connector

Pin 1	ALARM RESET	Pin 2	GND
-------	-------------	-------	-----

Table 4.6: CN18, Output connector to LED board

Pin 1	GND	Pin 9	Temperature Good
Pin 2	+5 V signal	Pin 10	Temperature Fail
Pin 3	+12 V signal	Pin 11	FAN Good
Pin 4	-5 V signal	Pin 12	FAN Fail
Pin 5	-12 V signal	Pin 13	N/A
Pin 6	HDD_1	Pin 14	+3.3 V signal
Pin 7	Power Good	Pin 15	+5 Vsb signal
Pin 8	Power Fail		

Table 4.7: CN26, External HDD LED connector

Pin 1	HLED_ACT	Pin 2	N/A
-------	----------	-------	-----

Table 4.8: FAN1~FAN7, Fan connectors

Pin 1	GND	Pin 3	FAN_DEC
Pin 2	+12 V		

Table 4.9: J1, External buzzer

Pin 1	Buzzer	Pin 2	+5 V
-------	--------	-------	------

Table 4.10: SW1, Fan number select switch

Pin 1	GND	Pin 5	GND
Pin 2	FAN_SEL1	Pin 6	FAN_SEL3
Pin 3	GND	Pin 7	GND
Pin 4	FAN_SEL2	Pin 8	RESET

4.3.2 Switch Settings

The alarm board is designed to connect with up to 7 fans. The number of fans connected should be set by adjusting switch SW1 on the alarm board.

Table 4.11: SW1. Fan number setting

Fan Number	SW 1-1	SW 1-2	SW 1-3	SW 1-4
0	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2 (default for ACP-1010MB)	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4 (default for ACP-1010BP)	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF

Note! *Connect the fan connectors in sequence, starting with FAN 1. If two fans are set on SW1, they must be connected to connectors FAN1 and FAN2. If the two fans are connected to other fan connectors, out of sequence, such as FAN1 and FAN3 or FAN2 and FAN3 or FAN3 and FAN4, then the alarm will not function correctly.*



4.4 Thermal Sensor

The ACP-1010 is configured with a thermal sensor located at the rear plate of the chassis. (see Figure 4.2 & 4.3) Please refer to Figure 4.4 for a diagram of the thermal sensor module layout.

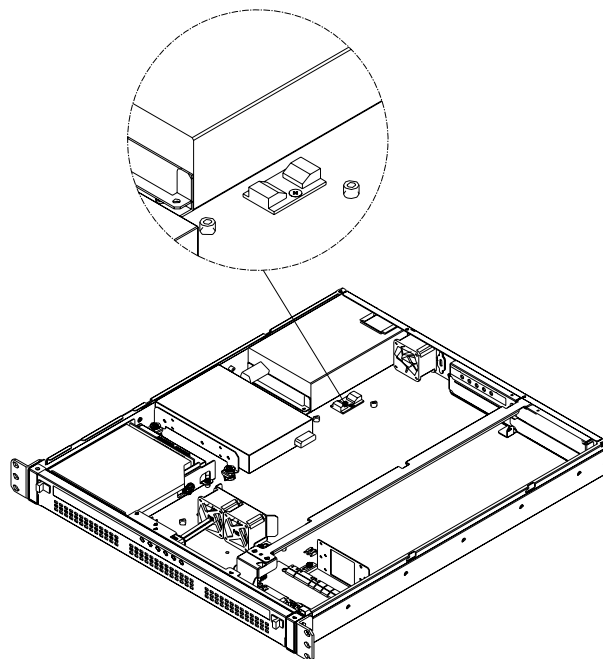


Figure 4.2 Thermal sensor location in ACP-1010BP

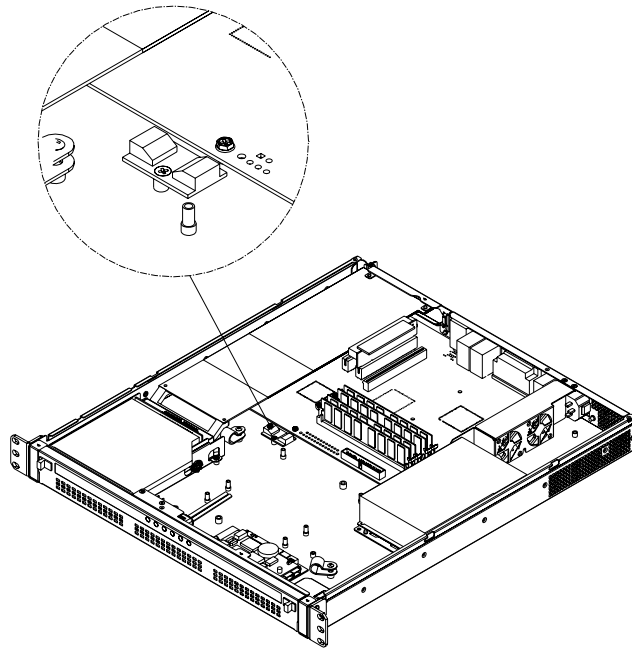


Figure 4.3 Thermal sensor location in ACP-1010MB

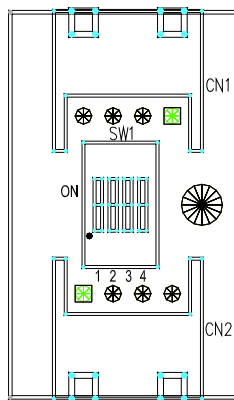


Figure 4.4 Thermal sensor module

The default sensor I.D. number is 1. Please refer to Table 4.13 to set the sensor I.D. to another number by adjusting switch SW1 on the sensor module.

Table 4.12: CN1 & CN2, Temperature sensor connector

Pin 1	+5 V	Pin 3	T_SDAT
Pin 2	T_SCLK	Pin 4	GND

Table 4.13: SW1, Thermal sensor I.D. number settings

Sensor I.D. No.	SW 1 - 1	SW 1 - 2	SW 1 - 3	SW 1 - 4
1 (default)	OFF	OFF	OFF	ON
2	OFF	OFF	ON	ON
3	OFF	ON	OFF	ON
4	OFF	ON	ON	ON
5	ON	OFF	OFF	ON
6	ON	OFF	ON	ON
7	ON	ON	OFF	ON
8	ON	ON	ON	ON

Appendix **A**

Exploded Diagram &
Parts List

A.1 Exploded Diagram

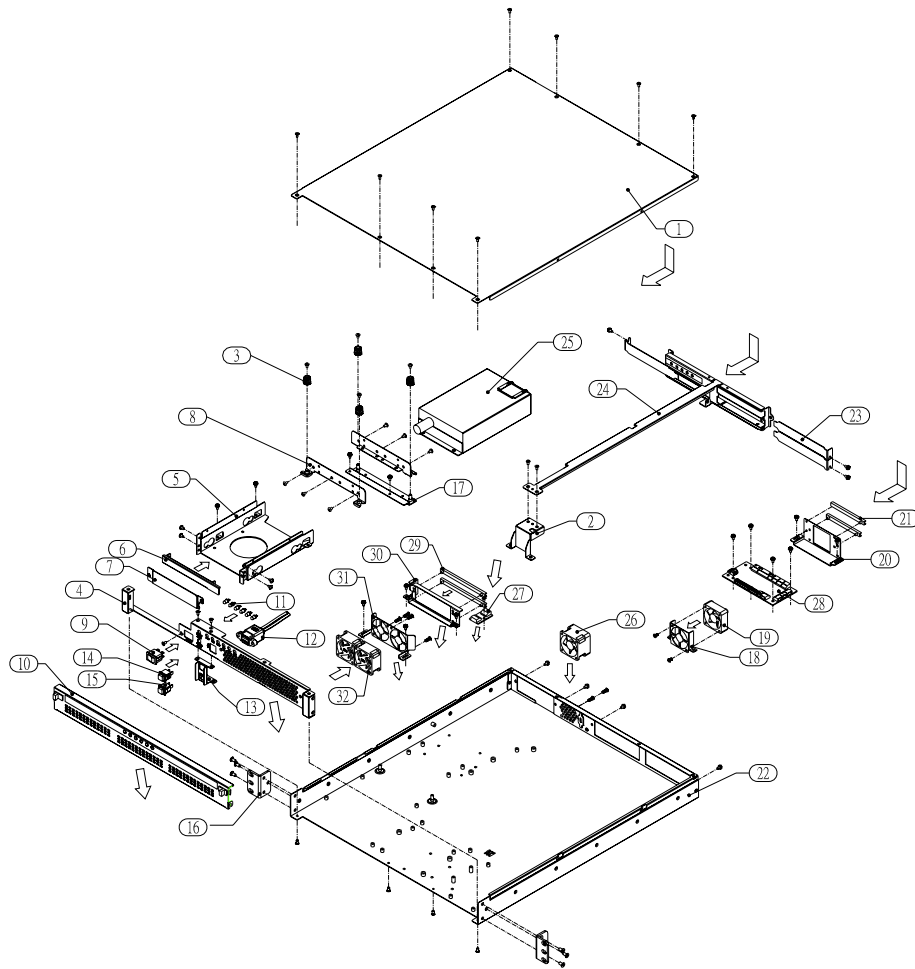


Figure A.1 Exploded Diagram of ACP-1010BP

Table A.1: Parts List

1	Top cover	17	HDD bracket rail
2	T bar support	18	Fan holder I
3	HDD rubber	19	System fan x 1(40*15mm)
4	Front panel	20	Card Guide holder
5	Driver Bay	21	PCB guide rail
6	Slim ODD cover	22	Chassis
7	3.5" drive cover	23	Adapter bracket
8	HDD bracket	24	Card support (T bar)
9	Power switch	25	Power
10	Front door	26	System fan x 1 (40*28mm)
11	LED housing	27	Thermal board
12	USB cable	28	Common alarm
13	Switch holder	29	PCB guide rail
14	System Reset Switch	30	Card guide
15	Alarm Reset Switch	31	Fan holder 2
16	Rack mount bracket	32	Dual system fan (40*28mm)

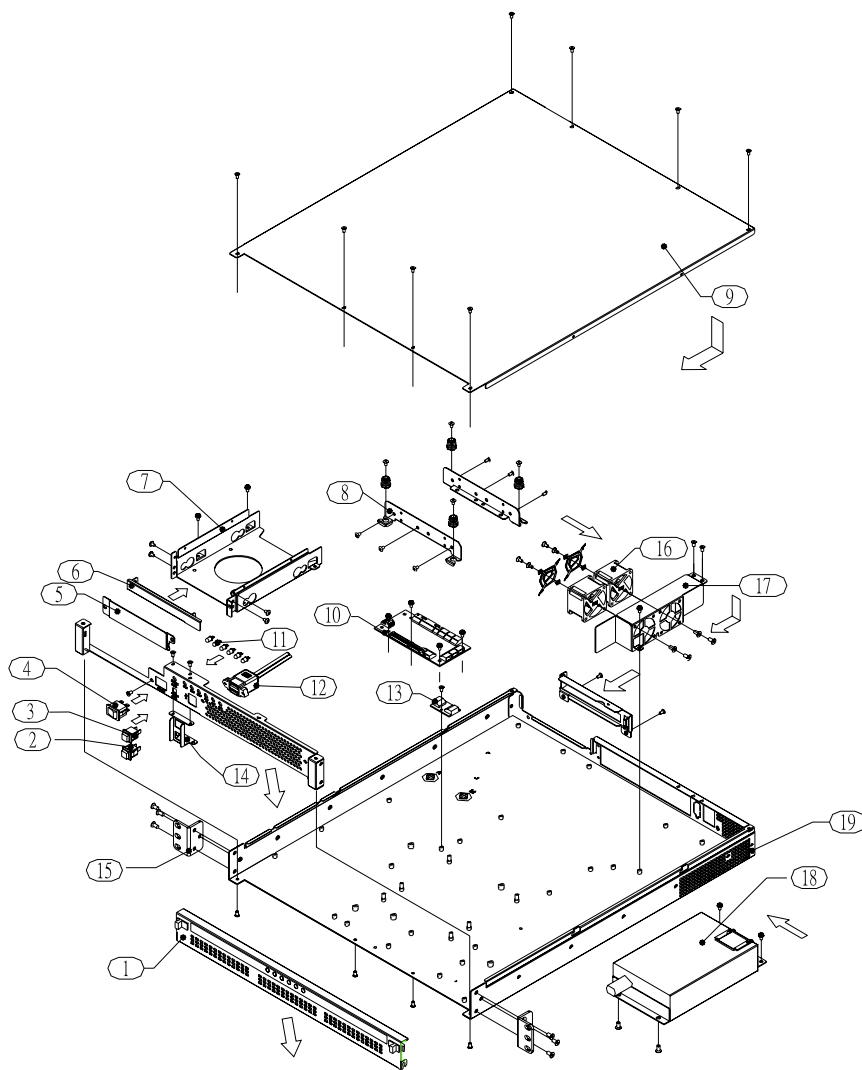


Figure A.2 Exploded Diagram of ACP-1010MB

Table A.2: Parts List			
1	Front door	11	LED housing
2	Alarm Reset switch	12	USB Cable
3	System Reset switch	13	Thermal sensor
4	Power switch	14	Switch holder
5	3.5" drive front cover	15	Rack mount bracket
6	Slim ODD front cover	16	Fan
7	Drive bay	17	Fan holder
8	HDD bracket	18	Power supply
9	Top cover	19	Chassis base
10	Alarm board		

Appendix **B**

Backplane,
Motherboard and
Riser Card Options

B.1 Backplane Options

ACP-1010 supports a variety of PICMG 1.0/1.3 backplanes. Please contact a local sales representative for detailed information.

Table B.1: PICMG1.3 Backplane Options

Model Name	Slots			
	SHB*	PCIe x 16	PCIe x 4	PCI
PCE-5B03V-01A1E	1	1	-	1
PCE-5B03V-00A1E	1	1	1	-

*System Host Board

Table B.2: PICMG1.0 Backplane Options

Model Name	Slots		
	PICMG	PCI	PCI-X
PCA-6103P2V-0A2E	1	2	-

B.2 Motherboard and Riser Card Options

Table B.3: ATX Motherboard Options

Model Name	Slots				
	PCI	PCI/ISA	ISA	AGP	SATA
AIMB-742	4 (32-bit)	1	1	1 (8X)	-
AIMB-744	2 (PCI-X 64-bit) 4 (PCI 32-bit)	-	-	1 (8X)	
AIMB-750	2 (PCI-X 64-bit) 4 (PCI 32-bit)	-	-	1 (4X)	
AIMB-760	1 (PCI-E 1X) 5 (PCI 32-bit)	-	-	-	4
AIMB-762	1 (PCIe 16X) 1 (PCIe 4X) 5 (PCI 32-bit)	-	-	-	4
AIMB-764	1 (PCIe 16X) 1 (PCIe 4X) 5 (PCI 32-bit)	-	-	-	5
AIMB-766	1 (PCIe 16X) 1 (PCIe 4X) 5 (PCI 32-bit)	-	-	-	6

Table B.4: MicroATX motherboard options

Model Name	Bus		
	PCI	AGP	SATA
AIMB-556	1 (PCIe x16) 1 (PCIe x4) 2 (PCI 32-bit)	-	3
AIMB-554	1 (PCIe x16) 1 (PCIe x4) 2 (PCI 32-bit)	-	2
AIMB-552	3 (PCI 32-bit)	-	2

Table B.5: Riser Card Options

	AIMB-R4104-01A1E	AIMB-RP10P-01A1E
Riser Card Interface	PCIe x4	PCI
Expansion Slot	1 PCIe x4	1 PCI
AIMB-766	-	Yes
AIMB-764	Yes	-
AIMB-762	Yes	-
AIMB-760	-	Yes
AIMB-750	-	Yes
AIMB-744	-	Yes
AIMB-742	-	Yes
AIMB-560	-	Yes
AIMB-556	Yes	-
AIMB-554	Yes	-
AIMB-552	-	Yes

Trusted ePlatform Services

ADVANTECH

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2009