

Introduction

Kickstand



Hand strap



After assembly, you can:

- Firmly hold RX10 by inserting your hand through the hand strap.
- Open the kickstand to place RX10 on a desk at an angle appropriate for viewing.




Assembly


Part 1: Attach the hand strap to the kickstand.

1. Press down the locking tab and lift up the clamp to release the upper cover. Remove the cover from the kickstand.
2. Two raised strips on the kickstand serve as fasteners for the hand strap.

Put the hand strap behind the kickstand. Fold over one end of the strap and engage a slot to the raised strip. The slot to use depends on how tight you want the hand strap to be.

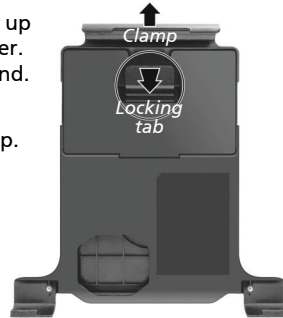

Proceed with the other end of the strap in the same way.

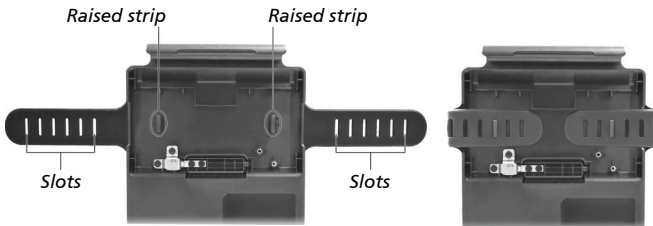

3. To replace the cover, insert its lower edge at an angle (1) and then firmly press the upper corners against the kickstand (2) to ensure the cover is fixed in place.



Part 2: Attach the kickstand to RX10.

1. Align the two bottom notches of RX10 with the two projecting parts on the kickstand and engage them (❶).
2. Place the clamp over RX10 to hold RX10 in position (❷).



Detaching the Kickstand

Pull the clamp off RX10 to detach the kickstand from RX10.





*Depending on the specific model purchased,
the look and color scheme of your device
and accessories may not exactly match the
graphics shown in this guide.*

