
The ultimate cobot gripper

Kenos® KCS Gripper

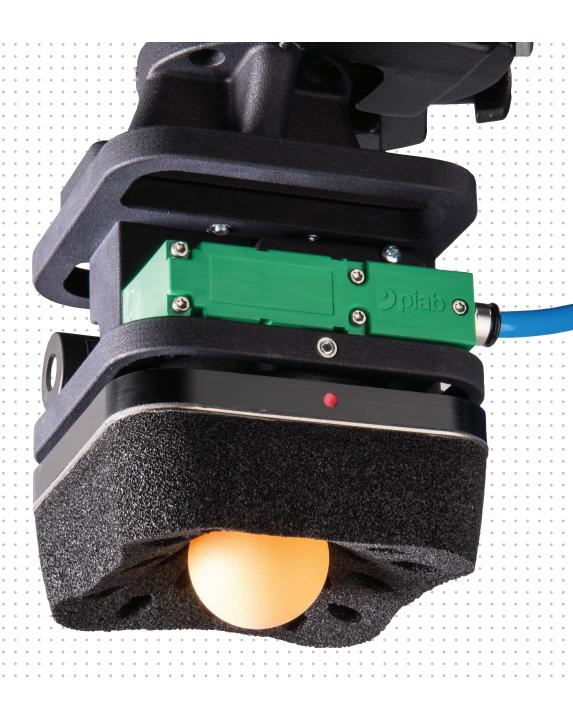





Stay Flexible - with the Kenos® KCS Gripper

For cobots to make processes more efficient, they must be as flexible as possible. Supporting the growing cobot market - an easy entry solution into automation technology - Piab has developed a single end effector for handling objects of just about any material, surface and shape.

In an environment of ever shorter product life cycles, a growing product mix and a continuous quest for individualized products, the use of an automation tool like the cobot in as many areas as possible is crucial for a profitable business. It plays an essential role in how flexible the cobot can handle things. Especially in the large application field of providing parts for processing by humans, the end effector is central. With the new compact Kenos® KCS vacuum gripper, Piab has taken exactly these requirements into account.

The Kenos® KCS gripper is an all-rounder and offers a unique level of flexibility when it comes to picking up objects. It allows for a wide range of use thereby eliminating the need for retooling. Thus, the cobot is ready for immediate use at different processes, ensuring optimal usage of its capacity. Paired with time and cost savings achieved through shorter downtimes and the lack of need for retooling, the Kenos® KCS gripper allows for a quick return on investment.

The concept is rounded up by features like its lightweight structure, powerful integrated air-driven COAX®SX cartridge vacuum technology as well as control valve and vacuum sensors access options turning the Kenos® KCS gripper into a plug-and-play system.

Lightweight Flexible Powerful

The Kenos® KCS gripper consists of a separate pump unit that integrates modular vacuum generation in the smallest of spaces with a gripper unit. Both are connected by a quick-change system. The entire unit can be attached to all common cobot models with a respective adapter.

SAVE LOAD CAPACITY FOR YOUR HEAVYWEIGHTS

With its body 3D printed in high quality SLS technology, the Kenos® KCS gripper is extremely lightweight. This allows customers to make the most of their cobot load carrying capacity - providing for extra weight to be lifted, moved and placed.

KEEP MOVING - EVERYTHING, EVERYWHERE, EVERYTIME

The main gripper consists of a technical foam, which can adapt to a wide variety of contours and can thus accommodate different parts flexibly. This eliminates in many cases the need for accurate identification of a workpiece as well as the gripping surfaces. When the foam layer is worn, it can simply be exchanged - without needing to replace the entire gripper.

GET MORE FOR LESS - HIGHER POWER AT LOWER INPUT

The pump unit is equipped with PIAB's powerful new generation COAX® SX cartridge vacuum technology. The lightweight pump unit is a small, integration-optimized vacuum pump and was selected because of its almost silent operation, making it ideal for use directly next to the operator. Because COAX® ejectors are up to twice as fast as other ejectors and deliver three times more flow than a conventional ejector with identical air consumption, the pump unit can deliver high performance even with low or fluctuating supply pressure.* This makes them particularly energy efficient. Accordingly, their use reduces the cost of providing compressed air and thus the total cost of production.

*Independent comparison tests at the Fraunhofer Institute for Machine Tools and Forming Technology IWU in Dresden have shown that the Piab ejectors require significantly lower compressed air to achieve the same output compared to ejectors from other manufacturers.

TURN YOUR COBOT INTO YOUR WORKER'S BEST FRIEND

Both gripper units are characterized by their edgeless design. Due to the rounded sides and the surface of technical foam, possible injury hazards are largely eliminated. This makes the gripper units particularly safe to use on cobots, which cooperate freely with humans and thus increases the acceptance by the employees.









All Features and Options at a Glance



PLUG-AND-PLAY - COMPACT AND LIGHT, THE KCS HAS ALL IT TAKES

The Kenos® KCS pump unit has everything needed already included - the powerful vacuum components, sensor technology, silencer and optional valve technology - requiring only a single mounting and connection step to the cobot. The connection to the Rethink Robotics brand cobots Clicksmart system is directly possible, for others adapters are available.

SMALL BUT POWERFUL - PUMP UNIT WITH COAX®SX CARTRIDGES

The pump unit is equipped with Piab's newest generation COAX®SX ejectors - providing high performance even at low or fluctuating feed pressures. It can be modified to double the unit's output easily if processes change.





QUIET SYSTEM, HAPPY EMPLOYEES - THANKS TO THE SILENCER

Reducing the noise of operation the silencer ensures a pleasant work environment with the lowest audible strain possible when the vacuum unit is in operation. The digital or analog vacuum sensor above the silencer provides the "part present" signal to the cobot, when an object is taken.

WHEN SPEED MATTERS - OPTIONAL BLOW-OFF VALVE

In case a fast product release is essential to production processes or to enhance efficiency, Piab can supply an optional blow-off valve allowing for fast vacuum reduction to speed-up product placement.





YOUR CHOICE - CONFIGURABLE VALVE UNIT

For installations on a new cobot without its own valves, Piab can provide a configured valve unit. For deployment with an existing robot equipped with an valve unit simply connect to your own.

5 Years Warranty on the Vacuum Pump Unit

MADE TO FIT ALL - ISO NORMED ADAPTERS FOR EASY ATTACHMENT

Choose between ISO normed adapters to easily attach the Kenos® KCS gripper to any cobot type you may be using - or planning to deploy.





TIME IS MONEY - CHANGE GRIPPERS IN THE BLINK OF AN EYE

The quick change system allows to exchange grippers with a simple twist - reducing downtime for retooling to a few seconds. For security it is equipped with a metal threaded insert to lock the system.

THE ALL-ROUNDER - TECHNICAL FOAM FOR A UNIVERSAL GRIP

The technical foam can easily adapt to almost any surface or shape. As a flow reduction version it treats products very gently while maintaining a reliable grip during movement.






KEEP IT SIMPLE AND CLEAN - WITH FDA APPROVED FOAM


For direct handling of food, the gripper can also be equipped with a special FDA-approved silicon technical foam. To maintain utmost flexibility for sensitive product handling, the general technical foam can be used as an intermediate layer.

LET IT SWING - SPECIAL BAG GRIPPER LIFTING UP TO 2 KG / 4.4 LBS

For special applications, such as the handling of plastic bags of concentrates or granulates, Piab has developed another gripper unit, which can be swiftly exchanged via the quick-change system.



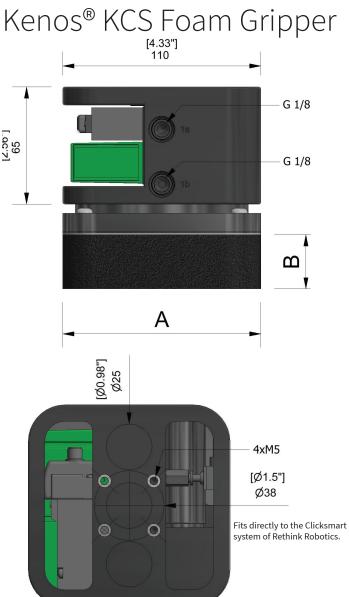

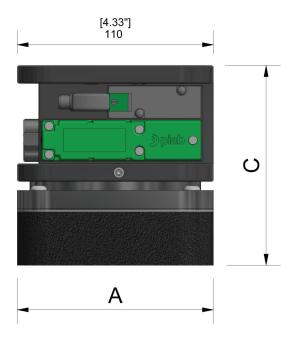


FOAM GRIPPER


| Туре | A mm / [inch] | B mm / [inch] | C mm / [inch] | Weight kg/[lbs] |
|------------------|------------------|---|---|--------------------|
| KCS.Q110.XXX.110 | 110 / [4.33"] | 10 / 20 / 30 [0.39"] / [0.79"] / [1.18"] | 92 / 102 / 112 [3.62"] / [4.02"] / [4.41"] | 0.76 [1.67] |
| KCS.Q110.XXX.150 | 150 / [5.91"] | 10 / 20 / 30 [0.39"] / [0.79"] / [1.18"] | 87 / 97 / 107 [3.42"] / [3.82"] / [4.21"] | 0.94 [2.07] |

GRIPPING FORCE OF THE KENOS® KCS FOAM GRIPPERTheoretic gripping force on a rigid and stable surface with a completely covered module, without safety factor.

| Туре | Force, N / [lbf], at vacuum level of | | | | | | | | |
|------------------------------|--------------------------------------|--------------|--------------|--------------|--------------|--------------|--------------|--|--|
| | 30% | 40% | 50% | 60% | | 80% | 90% | | |
| KCS.Q110.XXX.110 with step 1 | 81 / [18.2] | 109 / [24.5] | 136 / [30.6] | 163 / [36.6] | 190 / [42.7] | 217 / [48.8] | 244 / [54.9] | | |
| KCS.Q110.XXX.150 with step 1 | 136 / [30.6] | 181 / [40.7] | 226 / [50.8] | 271 / [60.9] | 317 / [71.3] | 362 / [81.4] | 407 / [91.5] | | |

Kenos® KCS Bag Gripper

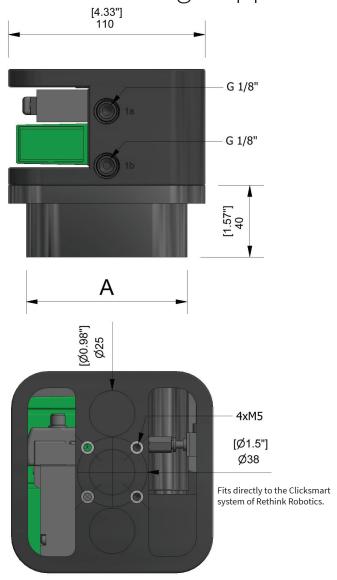


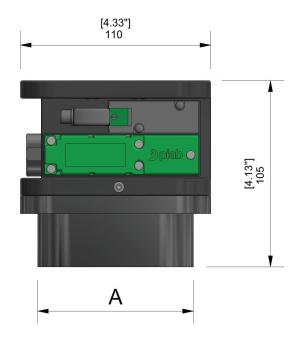



SQUARE SHAPED CUP (BCS)

| Туре | A mm / [inch] | Weight kg/[lbs] |
|------------------|------------------|--------------------|
| KCS.Q110.BCS.90 | 90/[3.54"] | 0.76 / [1.67] |
| KCS.Q110.BCS.110 | 110 / [4.33"] | 0.88 / [1.94] |

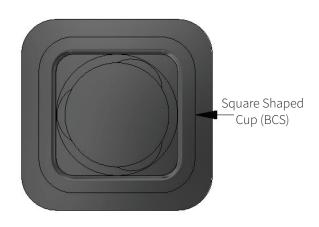

ROUND SHAPED CUP (BCR)


| Туре | A mm / [inch] | Weight kg/[lbs] |
|-----------------|------------------|--------------------|
| KCS.Q110.BCR.90 | ø90 / [ø3.54"] | 0.74 / [1.63] |

Kenos® KCS Gripper -ISO Standard Fixing Interface





INTERFACE ISO 9409-1-50-4-M6

[Ø1.24"] Ø31.5 [8094] @ 9 - 1 - 5 (0 - 4-1)

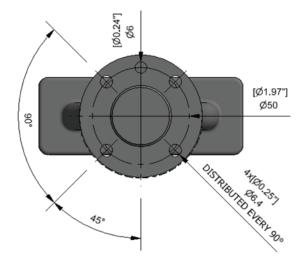

INTERFACE ISO 9409-1-40-4-M6

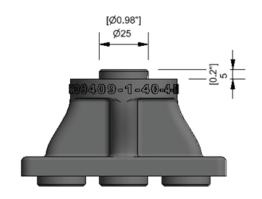

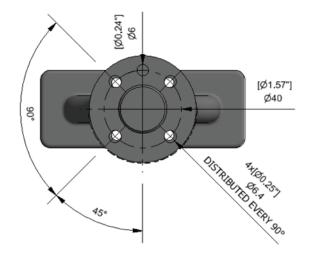

Kenos® KCS Gripper - General Technical Data

| Description | Unit | COAX® | | | |
|-------------------------------------|----------------|----------------|---------------|----------------|---------------|
| | | SX12 x 1 | SX12 x 2 | SX42 x 1 | SX42 x 2 |
| Feed pressure, optimum | MPa / [psi] | 0.5 / [72.5] | 0.5 / [72.5] | 0.5 / [72.5] | 0.5 / [72.5] |
| Max vacuum at optimum pressure | -kPa / [-inHg] | 85 / [25.0] | 85 / [25.0] | 90 / [26.6] | 90 / [26.6] |
| Air consumption at optimum pressure | NI/s / [scfm] | 0.72 / [1.53] | 1.44 / [3.05] | 2.21 / [4.68] | 4.42 / [9.37] |
| Max vacuum flow at optimum pressure | NI/s / [scfm] | 1.22 / [2.59] | 2.44 / [5.17] | [3.46 / [7.33] | 6.92 / [14.7] |

Order Information

KENOS® KCS FOAM GRIPPER


The top line (black) gives an example of an order number.

| KCS | Q110 | N | 3 | 0 | 1 | 110 | FR6 | SX422 | V1 | MD | 40 |
|----------------------------|--|---------------------|---------------------------------|-------------|---------------------|--------------------------------------|--|--|--|---|-----------------------|
| Kenos Cobot Solution | Dimension Pump Unit mm / [inch] | Туре | Foam Thickness mm /[inch] | Filter | Step | Dimensions mm / [inch] | Flow Reduction Unit Technology | Ejector Type SX plus no. of cartridges | Control Valves | Monitoring | Fixing Interface |
| | Q110 = 110 x 110mm [4.33"x4.33"] | N = EPDM Foam | 3 = 30 mm [1.18"] | 0 = without | 1 = Fine step | 110 = 110x110 mm [4.33"x4.33"] | FR6 = 0.6 mm [0.04"] (standard) | SX421 = 1 cartridge SX42 | X = Without solenoid valves | X = Without vacuum switch sensor | X= Without |
| | | | 2 = 20 mm [0.79"] | 1 = with | | 150= 150x150 mm [5.91"x5.91"] | FR8 = 0.8 mm [0.03"] | SX422 = 2 cartridges SX42 | V1= EV vacuum N.C. | MD = Vacuum switch | 40 = ISO 9409-1-40 |
| | | | 1 = 10 mm [0.39"] | | | | | SX121 = 1 cartridge SX12 | V2 = EV vacuum N.C. / EV blow off | MA = Analog 1-5 V sensor | 50 = ISO 9409-1-50 |
| | | | | | | | | SX122 = 2 cartridges SX12 | V3 = EV vacuum N.O. | | |

KENOS® KCS BAG GRIPPER

The top line (black) gives an example of an order number.


| KCS | Q110 | BCR | 90 | SX422 | V1 | MD | 40 |
|----------------------------|---|-----------------------|---------------------------------------|---|---|--|-----------------------|
| Kenos Cobot Solution | Dimension Pump Unit mm / [inch] | Bag Cup | Dimension mm / [inch] | Ejector Type SX plus no. of cartridges | Control Valves | Monitoring | Fixing Interface |
| | Q110 = 110 x 110 mm [4.33"x4.33"] | BCR = Round shape | 90 = 90 x 90mm [3.54"x3.54"] | SX421 = 1 cartridge SX42 | X = Without solenoid valves | X = Without vacuum switch sensor | X= Without |
| | | BCS = Square shape | 110 = 110 x 110mm [4.33"x4.33"] | SX422 = 2 cartridges SX42 | V1= EV vacuum N.C. | MD = Vacuum switch | 40 = ISO 9409-1-40 |
| | | | | SX121 = 1 cartridge SX12 | V2 = EV vacuum N.C. / EV blow off | MA = Analog 1-5 V sensor | 50 = ISO 9409-1-50 |
| | | | | SX122 = 2 cartridges SX12 | V3 = EV vacuum N.O. | | |

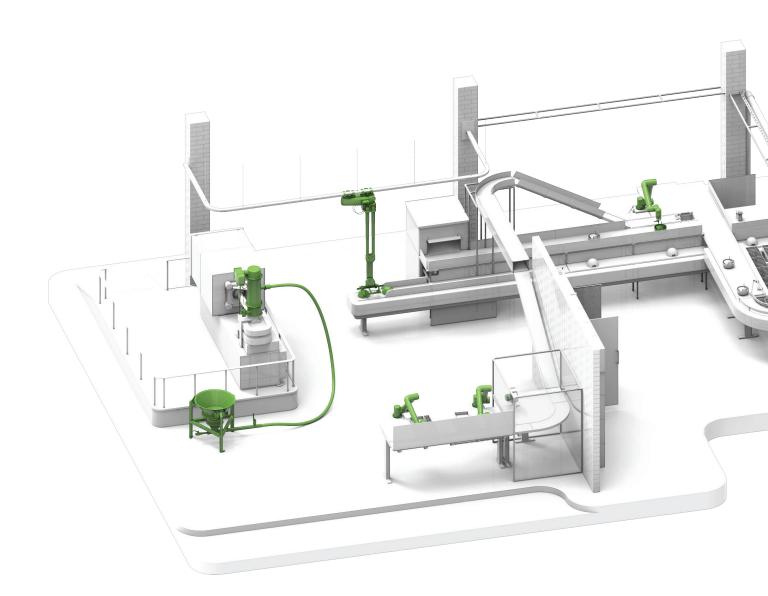

Piab - Your Gripping and Moving Solutions Provider

Piab provides smart solutions for the automated world, helping thousands of end users and machine producers in e-commerce logistics, food, pharma, automotive and other manufacturing industries to improve energy-efficiency, productivity and working environments. With 430 employees and SEK 1bn in sales 2017, Piab is a global organization, serving

customers in almost 70 countries from a network of subsidiaries and distributors. By leveraging the ongoing technological development in automation and robotics, and targeting high-growth segments and geographies, Piab's vision is to become the global leader in gripping and moving solutions.

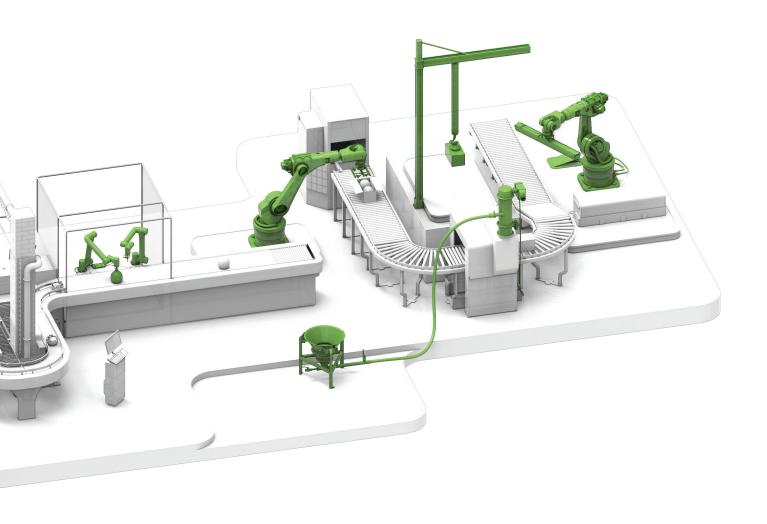

More Great Piab Product Innovations

CBG - CUSTOMIZABLE BAG GRIPPER

Design your own vacuum gripper for bags and pouches in just two minutes with Piab's user friendly software. A 3D- printed gripper with piGRIP® suction cups will be delivered to you.

piCOMPACT®23 - THE SMART PUMP

The innovative vacuum generator with fully integrated controls for smart manufacturing - holds in emergency but does not self-adhere and boosts energy efficiency at optimal vacuum.


piSMART® - INDUSTRY 4.0 READY

Building on intelligent features already available in some of Piab's vacuum equipment, piSMART® will offer a new level of control that underpins the pillars of Industry 4.0.







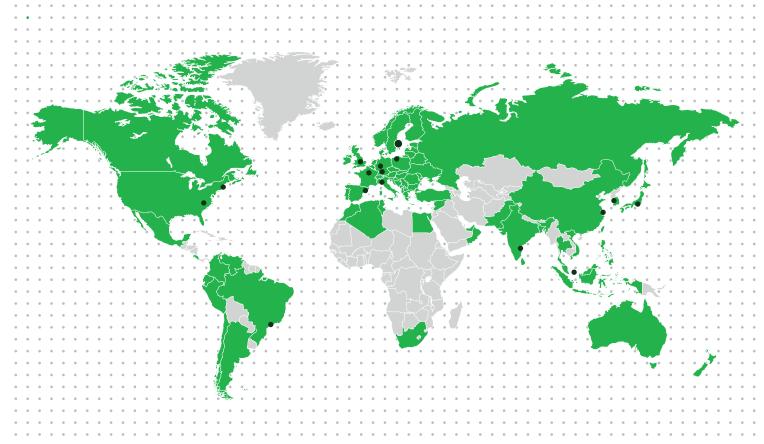

www.piab.com

BRAZIL - Sao Paulo Phone: +55 11 4492 9050 Email: info-brasil@piab.com

CANADA - Hingham MA (US) Phone: +1 781 337 7309 Email: info-usa@piab.com

CHINA – Shanghai Phone: +86 21 5237 6545 Email: info-china@piab.com

FRANCE - Lagny sur Marne Phone: +33 1 6430 8267 Email: info-france@piab.com

GERMANY - Butzbach Phone: +49 6033 7960-0 Email: info-germany@piab.com GERMANY - Schmallenberg Robotic gripping Phone: +49 (0) 29 72/962 17-11

Email: info-germany@piab.com MEXICO - Hingham MA (US)

Phone: +1 781 337 7309 Email: info-mxca@piab.com

INDIA - Chennai Phone: +91 9444 25 36 48 Email: info-india@piab.com

ITALY - Torino Phone: +39 011 226 36 66 Email: info-italy@piab.com

JAPAN – Tokyo Phone: +81 3 6662 8118 Email: info-japan@piab.com POLAND – Gdansk Phone: +48 58 785 08 50 Email: info-poland@piab.com

SPAIN - Barcelona Phone: +34 93 6333876 Email: info-spain@piab.com

SINGAPORE Phone: +65 6455 7006 Email: info-singapore@piab.com

SOUTH KOREA - Dokok-Dong Phone: +82 2 3463 0751 Email: info-korea@piab.com

SWEDEN - Stockholm (HQ)

Phone: +46 8 630 25 00 Email: info-sweden@piab.com SWEDEN - Mölndal Ergonomic handling Phone: +46 31 67 01 00 Email: info-sweden@piab.com

UNITED KINGDOM - Loughborough Phone: +44 1509 857 010 Email: info-uk@piab.com

USA - Hingham (MA) Phone: +1 781 337 7309 Email: info-usa@piab.com

USA - Xenia (OH) Robotic gripping Phone: +1 888 727 3628 Email: info-usa@piab.com

USA - Charlotte (NC) Ergonomic handling Phone: +1 704 527 5052 Email: info-usa@piab.com

